



GK-2202  
**ASHIKO**  
GAMING KEYBOARD

## User manual - Uputstvo

### Safety Instructions

1. Keep the keyboard away from sharp objects that could damage it.
2. Do not put heavy objects on the keyboard.
3. Do not stretch, twist or apply force to the keyboard.
4. To clean the keyboard, gently wipe it using a moist cotton cloth.
5. Make sure the keyboard is turned off before cleaning. Do not use liquid cleanser.

### Sigurnosne upute

1. Držite tipkovnicu podalje od oštih predmeta koji je mogu oštetiti.
2. Ne stavlajte teške predmete na tipkovnicu.
3. Nemojte istezati, uvijati ili primjenjivati silu na tipkovnicu.
4. Kako biste očistili tipkovnicu, nježno je obrišite vlažnom pamučnom krpom.
5. Provjerite je li tipkovnica isključena prije čišćenja. Nemojte koristiti tekuće sredstvo za čišćenje.

Fn+ESC	• ~
Fn+1	F1
Fn+2	F2
Fn+3	F3
Fn+4	F4
Fn+5	F5
Fn+6	F6
Fn+7	F7
Fn+8	F8
Fn+9	F9
Fn+0	F10
Fn+-	F11
Fn+=	F12
Fn+})	increase brightness
Fn+{	decrease brightness
Fn+;	slow down the speed
Fn+' "	increase the speed
LED 🌟	switch the light
Fn+WIN	Lock WIN
Fn+Y	Print Screen
Fn+U	Scroll Lock
Fn+I	Pause
Fn +H	Insert
Fn+J	Home
Fn+K	Page Up
Fn+N	DEL
Fn+M	End
Fn+,<	Page Down
Fn+W	WASD for shifting
Fn+Backspace	DEL
Fn+Ctrl	ESC ~ =/+ switch to ` ~ ~F12 Y U I H J K N M ,< switch to PrtSc, ScrLk, Pause, Ins, Home, PgUp, Del, End, PdDn

Fn+ESC	• ~
Fn+1	F1
Fn+2	F2
Fn+3	F3
Fn+4	F4
Fn+5	F5
Fn+6	F6
Fn+7	F7
Fn+8	F8
Fn+9	F9
Fn+0	F10
Fn+-	F11
Fn+=	F12
Fn+})	pojačavanje LED svjetla
Fn+{{	stišavanje LED svjetla
Fn+;:	smanjivanje brzine LED efekta
Fn+' "	povećavanje brzine LED efekta
LED 🌞	promjena načina osvjetljenja
Fn+WIN	zaključavanje WIN tipke
Fn+Y	Print Screen
Fn+U	Scroll Lock
Fn+I	Pause
Fn +H	Insert
Fn+J	Home
Fn+K	Page Up
Fn+N	DEL
Fn+M	End
Fn+,<	Page Down
Fn+W	WASD promjena u strelice
Fn+Backspace	DEL
Fn+Ctrl	ESC ~ =/+ promjena u ~ ~ ~ F12 Y U I H J K N M ,< promjena u PrtSc, ScrLk, Pause, Ins, Home, PgUp, Del, End, PdDn