



HAMACHI
MECHANICAL RGB GAMING KEYBOARD

User manual / Upute

Main specification:

- * 84 Keys for US layout, 85 keys for HR layout
- * Double injection keycap
- * Hot swappable
- * Full RGB light
- * Full keys anti-ghosting
- * With dual back feets, and 4 pcs anti-slip silicone pad on the back
- * ABS housing with inner metal board to add weight
- * 1.8 meters braided cable
- * Support for Win XP, Win7, Win8, Win10, Win11, OS X, Linux
- * Power-off Memory
- * Dimension: 311 * 121 * 41 mm
- * Weight: 690g +/-5g

EN-1

Light adjustment:

FN+ (← →) for backlight speed adjustment, total 5 levels
FN+ (↑ ↓) for backlight brightness adjustment, total 5 levels
FN+]]: Switch lights, 18 kinds of RGB light modes
FN+[[: light on / light off
FN+P: Monochrome cycle mode
FN+ESC: hold for 3 seconds to reset keyboard

Multimedia functions:

FN + F1= previous song
FN + F2= Next song
FN + F3= Play / pause
FN + F5= Mute
FN + F4= Stop
FN + F6= Volume +
FN + F7= Volume -

Windows lock:

FN+WIN-L: windows lock / unlock

ScrLk key:


Activate scroll lock function, key light is white

Note:

The position of the lighting control keys may vary depending on the keyboard layout.

Napomena:

Pozicija tipki za kontrolu osvjetljenja može varirati u ovisnosti o layoutu tastature.

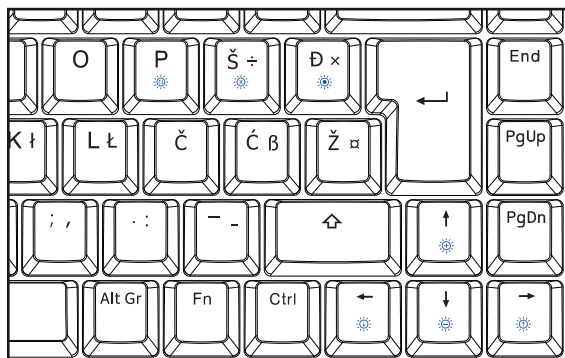

EN-2

Karakteristike:

- * 84 tipki US raspored tipki, 85 tipke svi ostali
- * Double injection tipke
- * Izmjenjivi prekidači
- * RGB osvjetljenje
- * Full keys anti-ghosting
- * Duple nogice za podizanje, 4 silikonske papučice protiv sklizanja
- * ABS kućište s unutarnjom metalnom pločom za čvrstoću
- * 1.8 metara pleteni kabel
- * Kompatibilna s: Win XP, Win7, Win8, Win10, Win11, OS X, Linux
- * Memorija u slučaju nestanka napajanja
- * Dimenzije: 311 * 121 * 41 mm
- * Težina: 690g +/-5g

Podešavanje osvjetljenja:

FN+ (← →) for backlight speed adjustment, total 5 levels
FN+ (↑ ↓) for backlight brightness adjustment, total 5 levels
FN+]]: Switch lights, 18 kinds of RGB light modes
FN+[[: light on / light off
FN+P: Monochrome cycle mode
FN+ESC: hold for 3 seconds to reset keyboard

Multimedijske tipke:

FN + F1= prethodna pjesma
FN + F2= sljedeća pjesma
FN + F3= Play / pauza
FN + F5= Nečujno
FN + F4= Stop
FN + F6= Glasnoća +
FN + F7= Glasnoća -

Zaključavanje Windows tipke:

FN+WIN-L: zaključavanje / otključavanje Windows tipke

ScrLk tipka:

Aktiviranje scroll lock funkcije, svjetlosni indikator svijetli bijelo

HR-1