



NAGAMAKI

MECHANICAL LOW PROFILE GAMING KEYBOARD

User manual

Main specification:

- * Buttons: 60% Compact 61 keys (US layout) / 62 keys (Other layouts)
- * Switches: Low profile mechanical Red, Blue or Brown (depends on model)
- * Anti-ghosting: Full keys
- * Full key Rainbow LED backlight
- * Dimensions: 292 mm x 103 mm x 25 mm
- * Material: ABS plastic
- * Key life: over 50 million times
- * Weight: approx. 320 g
- * 19 LED effects with adjustable light brightness and running speed
- * 1.5 m Type-C PVC detachable cable
- * Supported OS: Win 7 / 8 / 10 / 11

FN + left Ctrl = Switch between 2 different FN keyboard modes.

* Keyboard mode 1:

Press 1 and it types 1; Press Y and it types Y; Press /? and it is " /? ".

Press FN+1 and it types F1, press FN+Y and it types "Prtsc"; Press Fn + /? and it is "↑";

* Keyboard mode 2:

Press 1 and it types F1; Press Y and it types "Prtsc"; Press /? and it is "↑";

Press FN+1 and it types 1, press FN+Y and it types Y; Press Fn + /? and it is " /? ";

EN-1

Combined keys	Function	Remarks
FN+ESC	-	
FN+ right shift+ESC	-	
FN+1	F1	
FN+2	F2	
FN+3	F3	
FN+4	F4	
FN+5	F5	
FN+6	F6	
FN+7	F7	
FN+8	F8	
FN+9	F9	
FN+0	F10	
FN+.	F11	
FN+=	F12	
FN+/?	↑	
FN+ALT GR	←	
FN+APP	↓	
FN+ right Ctrl	→	
FN+]]	Brightness +	3 levels + light off
FN+[[Brightness -	3 levels + light off
FN+::	Light running speed -	3 levels
FN+~	Light running speed +	3 levels
FN+	Rainbow light mode adjust	19 light modes
FN+WIN	Windows lock/unlock	
FN+space bar	Re-set KB	Long press 3 seconds to re-set KB to default mode
FN+Y	Print Scr	
FN+U	Scroll Lock	
FN+I	Pause	
FN+H	Insert	
FN+J	Home	
FN+K	Page Up	
FN+N	DEL	
FN+M	End	
FN+,<	Page Down	
FN+Backspace	DEL	
FN+W	shifting between WASD and ↑←→	
FN+ENTER	Light off	

EN-2

WARRANTY CARD / JAMSTVENI LIST

ITEM/MODEL:

Naziv/model proizvoda:

RECEIPT NO. / DATE OF PURCHASE:

Broj / datum računa:

SELLING SPOT (COMPANY):

Prodajno mjesto:

THE CUSTOMER:

Kupac:

WARRANTY PERIOD (MONTHS):

Jamstveni rok (Mjeseci):

36

SIGNATURE / STAMP:

Potpis i pečat:

All White Shark products are examined and tested after each stage of the production process and have all the required certificates (EMC, CE, ...). The products are subject to the following warranty conditions: - The warranty period for White Shark products is 36 months (on batteries 6 months) and begins on the day of being sold in the store. - The warranty can only be claimed upon presentation of the original purchase invoice and a filed warranty paper with a stamp from the store it was bought at, and if the product has original packaging and all components and equipment. - All malfunctioning of the product resulting from factory defects, that occur during the warranty period, and in the normal use of the product in compliance with all instructions will be removed. This warranty covers only defects in material and production. - If the product malfunctions during the warranty period, your White Shark distributor will give you the product (after which is checked by a professional) repaired or replaced. - If the repair at the authorized service center is not completed within 30 days of being received at the service center, we will replace the product with a new one. If the repair during the warranty period lasts longer than 15 days, the warranty period is extended by as many days as the repair lasted. - If the device needs to be repaired within the warranty period, contact the store where you bought the product. If the product has to be sent to an authorized service center or general distributor, please send the product (with all parts and accessories) in the original packaging and with all the necessary documents (invoice, warranty card, etc.). The product can be repaired only in the authorized service center of the importer. The costs of shipping the product to the service center are funded by the customer. Possible damage to the product that can occur during transport is at the expense and risk of the buyer. Sending the product from the service center to the customer is funded by the service technician/the importer. This warranty does NOT cover: - Damage or malfunctions that would occur as a result of incorrect connection, incorrect polarization, incorrect battery placement, etc. - Defects caused by improper handling of products, use of parts or equipment that is not prescribed by our specifications, unauthorized product modification, and defects mechanical damage to the product. - Defects that can occur due to product fall, use of force, natural disasters (flood, fire, thunder, earthquake, ...), due to battery leakage, due to unstable 220V voltage, frequent variations and/or power outages, etc. - Damage caused during transport to the customer. - Products that have been opened or repaired by an unauthorized person. - Parts that are considered consumables such as batteries, etc.

Svi White Shark proizvodi su provjereni i testirani nakon svake faze proizvodnog procesa te imaju sve potrebne certifikate (EMC, CE, ...) te podliježu sljedećim jamstvenim uvjetima: - Jamstveni rok na White Shark proizvode je 36 mjeseci (na baterije 6 m) i počinje teći danom prodaje u trgovini. - Jamstvo se može ostvariti samo uz predložene originalnog računa o kupnji i uredno popunjeno jamstveno lista sa žigom trgovine, te ako proizvod ima originalnu ambalažu i sve sastavne dijelove i opremu. - Svi nedostaci i kvarovi koji su posljedica tvorničkih grešaka i koji su nastali u jamstvenom roku i pri normalnoj uporabi proizvoda i pri poštivanju svih naputaka će biti otklonjeni. Ovo jamstvo obuhvaća samo greške nastale u materijalu i izradi. - Ako se proizvod pokvari tijekom jamstvenog roka, Vas White Shark distributer će vam proizvod popraviti ili zamijeniti nakon što ga provjeri stručna osoba. - Ako popravak u ovlaštenom servisu nije izvršen u roku 30 dana od primitka u servis, proizvod ćemo zamijeniti novim. U slučaju da popravak u jamstvenom roku traje duže od 15 dana, jamstveni rok se produžuje za onoliko dana koliko je popravak trajao. - Ako se ukáže potreba popravka uređaja u jamstvenom roku, kontaktirajte trgovinu u kojoj ste proizvod i kupili. Ako proizvod treba poslati ovlaštenom servisu ili generalnom distributeru, molimo Vas da kompletan proizvod (sa svim dijelovima i opremom) bude zapakiran u originalnu ambalažu te da priložite sve potrebne dokumente (račun i ovjereni jamstveni list). Popravak aparata vrši se isključivo u ovlaštenom servisu uvoznika. Troškove prijevoza proizvoda na servis snosi kupac. Kupac preuzima rizik za moguća oštećenja tijekom prijevoza. Slanje proizvoda od servisa do kupca snosi serviser tj. uvoznik. Ovo jamstvo NE obuhvaća: - Oštećenja ili kvarove koji su nastali kao posljedica nepravilnog priključivanja, krive polarizacije, pogrešnog stavljanja baterija i sl. - Kvarove nastale zbog nepropisanog rukovanja proizvodom, korištenja dijelova ili opreme koja nije propisana našim specifikacijama, neovlašteno modificiranje proizvoda te kvarove nastale mehaničkim oštećenjem proizvoda. - Kvarove koji mogu nastati uslijed pada proizvoda, uporabe sile, više sile tj. elementarnih nepogoda (poplava, požar, grom, potres, ...), uslijed curenja baterije, uslijed nestabilnog 220V napona, čestih varijacija i/ili nestanaka struje i sl. - Oštećenja nastala pri prijevozu do kupca. - Proizvod koji je otvoren i/ili popraavljan od strane neovlaštene osobe. - Dijelove koji se smatraju potrošnicima kao što su baterije i sl.



EN-3



NAGAMAKI

MECHANICAL LOW PROFILE GAMING KEYBOARD

Upute

Karakteristike:

- * Broj tipki: 60% Compact 61 tipki (US layout) / 62 tipki (Other layouts)
- * Prekidači: Niskoprofilni mehanički Crveni, Plavi ili Smeđi (ovisno o modelu)
- * Anti-ghosting: Sve tipke
- * Pozadinsko osvjetljenje: Efekt duge
- * Dimenzije: 292 mm x 103 mm x 25 mm
- * Materijal: ABS plastika
- * Životni vijek: preko 50 milijuna pritisaka
- * Težina: cca. 320 g
- * 19 LED efekata s podesivom jačinom osvjetljenja i brzinom izmjene efekta
- * 1.5 m Type-C PVC odvojivi kabel
- * Podržani OS: Win 7 / 8 / 10 / 11

FN + left Ctrl = Switch between 2 different FN keyboard modes.

* Način rada 1:

Pritisnite 1 piše 1; Pritisnite Z piše Z; Pritisnite _ and it is "-_".

Pritisnite FN+1 aktivira F1; Pritisnite FN+Z aktivira "Prtsc"; Pritisnite Fn + _ aktivira "↑";

* Način rada 2:

Pritisnite 1 aktivira F1; Pritisnite Z aktivira "Prtsc"; Pritisnite _ aktivira "↑";

Pritisnite FN+1 piše 1; Pritisnite FN+Z piše Z; Pritisnite Fn + _ piše "-_";

HR-1

Combined keys	Function	Remarks
FN+ESC	-	
FN+desni shift+ESC	-	
FN+1	F1	
FN+2	F2	
FN+3	F3	
FN+4	F4	
FN+5	F5	
FN+6	F6	
FN+7	F7	
FN+8	F8	
FN+9	F9	
FN+0	F10	
FN . F11	F11	
FN+ F12	F12	
FN+ _ ^	↑	
FN+desni ALT	←	
FN+APP	↓	
FN+desni Ctrl	→	
FN+Š	Osvjetljenje -	3 razine + isključeno
FN+D	Osvjetljenje +	3 razine + isključeno
FN+Č	Brzina osvjetljenja -	3 razine
FN+Ć	Brzina osvjetljenja +	3 razine
FN+Ž	Izmjena LED efekata	19 različitih načina
FN+WIN	Zaklj./otključavanje WIN tipke	
FN+razmaknica	Re-set KB	Pritisnuti na 3 sekunde za vraćanje na tvorničke postavke
FN+Z	Print Scr	
FN+U	Scroll Lock	
FN+I	Pause	
FN+H	Insert	
FN+J	Home	
FN+K	Page Up	
FN+N	DEL	
FN+M	End	
FN+PgDn.	Page Down	
FN+Backspace	DEL	
FN+W	Prebacivanje WASD na ↑←→	
FN+ENTER	Gašenje LED	

HR-2



HR-3