

WHITE SHARK  
**MADAL**  
 BT SPEAKER  
 User Manual



Please read user manual carefully and keep it for your records


**Notice for Use:**

- 1.For the first use, please charge the battery first. Do not play music while charging.
- 2.Please use certified DC 5V cable for charging.
- 3.When music is played, if the sound is intermittent, it may be lack of power, please charge it firstly.
- 4.Active the Bluetooth feature on the phone,laptops or tablets, and set the device to search for wireless device.

**Specifications:**

Material:ABS+Metal grill  
 Bluetooth version: 5.0  
 Bluetooth distance: 10M  
 Rechargeable battery: 4000mAh  
 Speaker power: 2\*10W  
 Function: BT/TF/AUX/USB/LED/TWS  
 Charging port: Type-C  
 Dimension: 223\*88\*88mm  
 Waterproof level: IPX5  
 LED color running light

**Functional buttons:**

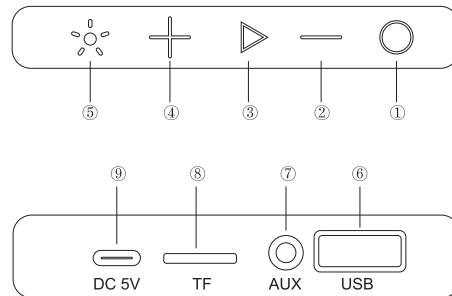

- |   |                        |
|---|------------------------|
| ① ON/OFF,Mode Switch                    | ⑥ USB PORT             |
| ② Previous Music/Decrease Volume Button | ⑦ Aux Input            |
| ③ Play&pause,TWS Button                 | ⑧ TF card slot         |
| ④ Next Music/Increase Volume Button     | ⑨ Type C charging port |
| ⑤ Light mode                            |                        |

**Includes:**

- 1\*Type-C charging cable
- 1\*User Manual
- 1\*Speaker

**ON/OFF / Mode Button**

Long press to turn on/off the speaker.  
 Short press to switch to BT/ SD card/USB drive/Aux  
 Place the speaker close to (within 10 metres of) your Bluetooth enabled device. If not in Bluetooth mode, short press Power Button to switch to Bluetooth mode. Enable Bluetooth function on your Bluetooth-enabled smartphone, tablet or media player; navigate to the Bluetooth setting menu, and search for new devices. The Bluetooth name for this speaker is 'OS-876'. Once connected, you can press and hold Previous or Next Button to play the previous or next song

**Next Music/Increase Volume Button:**

Short press to increase the volume  
 Long press to change to next music

**Previous Music/Decrease Volume Button:**

Short press to decrease the volume  
 Long press to change to previous music

**Play&Pause,TWS Button**

Short press to pause or play music  
 For incoming calls, click to answer the call, click again to hang up the call, long press to reject the phone call.Double click in short time to redial the last number.

Before entering TWS mode, make sure both speakers are powered on and should be in Bluetooth mode, none of them should be connected to the mobile phone or any other devices. In any one speaker long press Play&Pause button",you will hear the sound which means that the two speakers begin to enter the paired state.After connection, both speakers will automatically pair and play at the same time.

Long press Play&Pause button again to disconnect TWS.

When in FM mode, long press the play & pause button to search the channels automatically, then press the volume button to select the channels you like.

**Light Mode**

Short press to change the LED light modes till to turn off the lights  
 Long press to turn off or turn on the lights.

**USB Reading/TF Card Reading/AUX Input:**

Connect a USB/TF card , or an AUX cable connected to your

device to the appropriate port. If needed, press the 'Power' Button to switch to the correct mode..

**Charging:**

Connect the small end of the Type C charging cable (included) to the Type C port located on the back of the speaker. Connect the larger end of the cable to your computer's USB port or an AC adaptor(not included).The LED indicator will turn red while charging. Once fully charged, the red LED will turn off.

**Safety instructions:**

Do not disassemble, throw away or damage this Product. Consult your local waste collection agency for proper disposal or recycling methods.

This product is not a toy. Use extra caution while children are using this product.

Keep the wireless Speaker away from direct sunlight, fire and high voltage equipment. Do not store the Wireless Speaker inside a car during hot weather. Remember, a closed car acts as a greenhouse allowing the inside temperature to possibility reach over 80°C. Device may become warm while charging.Be assured to turn product completely off when plugging and unplugging into outlet. Damage, shock, and/or injury can occur if this warning is not heeded properly.