


Thank you for purchasing GSP-968 MOOD Gaming Speaker. We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers.

## 1. Product Functions

- ① USB plug for power
- ② 3.5 mm audio plug for sound source
- ③ The volume knob
- ④ RGB 7-color lighting with rainbow effects

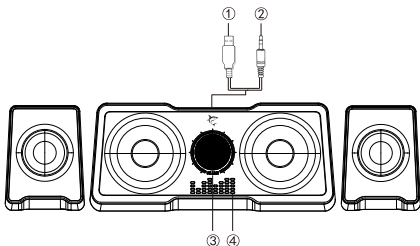

## 2. Specifications

Power:	5 W x 2 + 3 W x 2
Impedance:	4 Ω
Material:	Plastic
Frequency range:	150 Hz - 20 kHz
Input sensibility:	700 mV ± 50 mV
Power supply:	== DC 5 V / 1 A
S/N ratio:	≥ 85 db
Driver Size:	3 inch x 2 + 2 inch x 2
Interface:	3.5 mm AUX audio, USB (power)
Light:	RGB 7-color lighting with rainbow effect
USB & Audio cable:	Subwoofer approx. 1.3 m, satellite approx. 0.8 m
Product size:	234 x 98 x 107mm + 75 x 98 x 100 mm x 2

## 3. Package Contents

- 1 x GSP-968 MOOD Gaming Speaker
- 1 x User Guide

## 4. Operation Instructions

1. Connect the 3.5 mm jack and USB of the speaker to PC correctly
2. Check whether the PC can recognize the speaker
3. Operate according to User Manual;
4. Please do not use the product in an extreme environment

## 5. Usage

1. Please do not take apart or exchange any component except there are especially marked operations in User Manual
2. Please do not put the product into water or any other liquid, for this product is not water-proof
3. Please disconnect the product with other device and remove it if any liquid splashes into it for it may cause fire or electric shock if the users continue to use it
4. Please make sure that the hands are dry when installing or taking apart the product in order to avoid getting an electric shock
5. Please do not expose the product close to heat source or the fire directly
6. Please do not put the product into a great magnetic field for it may cause dysfunctions

## 6. Abnormal Occurrences

Solutions to the conditions in which the device cannot be recognized, with no functions or dysfunctions.

Check whether 3.5 mm jack and USB of the computer and speaker are damaged.

Check whether 3.5 mm jack and USB of the speaker are inserted correctly.


Check whether computer settings are correct; disconnect and reinsert; restart computer.

If the suggestions above cannot solve the problems, please contact the local dealer!

Hvala vam što ste kupili GSP-968 MOOD gaming zvučnik. Preporučujemo da odvojite malo vremena čitajući ovaj priručnik s uputama kako biste u potpunosti razumjeli sve operativne značajke zvučnika.

## 1. Funkcije zvučnika

- ① USB sučelje napajanja
- ② 3.5 mm audio sučelje za izvor zvuka
- ③ Gumb za glasnoću
- ④ RGB 7-bojno osvjetljenje s efektom duge

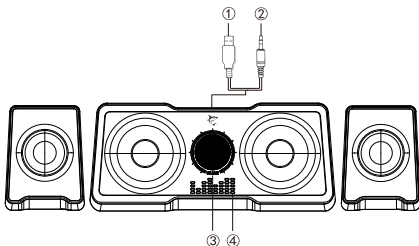

## 2. Karakteristike

Snaga:	5 W x 2 + 3 W x 2 RMS
Impedancija:	4 Ω
Materijal:	Plastika
Frekvencijski raspon:	150 Hz - 20 kHz
Ulazna osjetljivost:	700 mV ±50 mV
Napajanje:	=== DC 5 V / 1 A
Odnos signala i šuma:	≥ 85 db
Promjer drivera zvučnika:	3 inča x 2 + 2 inča x 2
Sučelje:	3.5 mm AUX audio, USB (napajanje)
Osvjetljenje:	RGB 7-bojno s efektom duge
USB / Audio kabel (dužina):	Subwoofer cca. 1.3 m, sateliti cca. 0.8 m
Dimenzije zvučnika:	234 x 98 x 107mm + 75 x 98 x 100 mm x 2

## 3. Sadržaj pakiranja

- 1 x GSP-968 MOOD Gaming zvučnik
- 1 x Korisničke upute

## 4. Upute za spajanje zvučnika

1. Spojite 3.5 mm i USB priključak zvučnika na računalo
2. Provjerite da li računalo prepoznaje zvučnik
3. Zvučnik koristite u skladu s ovim uputama
4. Ne koristite proizvod u ekstremnim uvjetima (npr. hladnoća, vrućina, velika vlažnost zraka)

## 5. Način upotrebe

1. Nemojte rastavljati niti mijenjati bilo koju komponentu uređaja osim radnji opisanih u ovim uputama
2. Nemojte stavljati proizvod u vodu ili bilo koju drugu tekućinu, jer ovaj proizvod nije vodootporan
3. Odspojite proizvod s napajanja i uklonite ga ako dođe u kontakt s bilo kakvom tekućinom jer u suprotnom može uzrokovati požar ili strujni udar ako ga nastavite koristiti
4. Ne spajajte niti ne dirajte uređaj s mokrim rukama kako biste izbjegli strujni udar
5. Molimo ne izlažite uređaj izvoru topline ili izravnoj vatri
6. Ne stavljajte uređaj u jako magnetsko polje jer ono može uzrokovati poremećaje u radu

## 6. Abnormalne pojave

Rješenja za uvjete u kojima uređaj nije prepoznat na računalu, bez funkcija ili distfunkcija.

Provjerite da li su oštećeni 3.5 mm priključak ili USB na računalu i zvučniku.

Provjerite da li su 3.5 mm priključak i USB zvučnik pravilno spojeni.

Provjerite da li su postavke računala ispravne; odspojite i ponovno spojite; ponovno pokrenite računalo.

Ako gore navedeni prijedlozi ne mogu riješiti problem, obratite se lokalnom prodavaču!