

User manual

Combination Key	Function	Description
FN+ESC	`	
FN+Shift+ESC	~	
FN+1	F1	
FN+2	F2	
FN+3	F3	
FN+4	F4	
FN+5	F5	
FN+6	F6	
FN+7	F7	
FN+8	F8	
FN+9	F9	
FN+0	F10	
FN+-	F11	
FN+=	F12	
FN+ ↑	Increase the light brightness	3 levels + light off Pls note all breathing light effect didnot support light off
FN+ ↓	Decrease the light brightness	3 levels + light off Pls note all breathing light effect didnot support light off
FN+ ←	Decrease the light speed	3 levels
FN+ →	Increase the light speed	3 levels
FN+	Light modes shift	Total 19 kinds of light modes
FN+WIN-L	Windows lock	
FN+space bar	Return KB to the default status	Long press 3 seconds
FN+Y	Print Scr	
FN+U	Scroll Lock	
FN+I	Pause	
FN+H	Insert	
FN+J	Home	
FN+K	Page Up	
FN+N	DEL	
FN+M	End	
FN+,<	Page Down	
FN+Enter	Light On/Off	
FN+Backspace	DEL	
FN+CTRL-L	* 1~=/+ shifts to F1 to F12 * ESC Y U I H J K N M ,< ← shifts to `~ Print Scr Scroll Lock Pause Insert Home Page Up DEL End Page Down DEL	
FN+W	Shifts between W A S D and ↑ ↓ ← →	

Upute

Kombinacija tipki	Funkcija	Opis
FN+ESC	,	
FN+ shift+ESC	..	
FN+1	F1	
FN+2	F2	
FN+3	F3	
FN+4	F4	
FN+5	F5	
FN+6	F6	
FN+7	F7	
FN+8	F8	
FN+9	F9	
FN+0	F10	
FN+-	F11	
FN+=	F12	
FN+ ↑	Pojačavanje intenziteta LED osvjetljenja	3 razine + ugašeno Neki efekti ne podržavaju OFF (ugašeni) način rada
FN+ ↓	Smanjivanje intenziteta LED osvjetljenja	3 levels + ugašeno Neki efekti ne podržavaju OFF (ugašeni) način rada
FN+←	Usporavanje LED efekta	3 brzine
FN+→	Ubrzavanje LED efekta	3 brzine
FN+Ž	Izmjena LED efekta	19 različitih efekata
FN+WİN-L	Zaključavanje Windows tipke	
FN+razmaknica	Vraćanje na početne postavke	Pritisnuti i zadržati 3 sekunde
FN+Z	Print Scr	
FN+U	Scroll Lock	
FN+I	Pause	
FN+H	Insert	
FN+J	Home	
FN+K	Page Up	
FN+N	DEL	
FN+M	End	
FN+, ;	Page Down	
FN+Enter	Light ON/OFF	
FN+Backspace	DEL	
FN+CTRL-L	* 1~/+= se mijenja u F1 - F12 * ESC Y U I H J K N M , < ← se mijenja u ? ` ~ Print Scr Scroll Lock Pause Insert Home Page Up DEL END Page Down DEL	
FN+W	Mijenjanje između W A S D i ↑ ↓ ↔	