

# RC-01403-LG

## User manual

Your universal remote requires two (2) AAA batteries (not included). Alkaline batteries are recommended.



Rating voltage:  
3V (2x AAA battery)

\* batteries are not included  
in the package

### Battery Installation

1. On the back of the remote, pull down on the textured surface and slide battery cover downward to remove.
2. Match the (+) and (-) marks on the batteries to the (+) and (-) marks inside the battery compartment, then insert two (2) AAA batteries. Be sure to use fresh batteries.
3. Position battery cover slightly below opening and push upward to lock into place.

NOTE: If your remote stops operating properly, replace the batteries with new ones.

### Battery Precautions

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.
- Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with local and national regulations.

Producător: : SBOX TECHNOLOGY LTD, FLAT 906, 9/F., WORKINGPORT COMM. BLDG., 3 HAUFOOK ST. TSIM SHA TSUI, KOWLOON, HONG KONG, info@Whiteshark.gg, www.whiteshark.gg  
Country of origin: China. Importator EU: SMIT ELECTRONIC, Metanska 1, 44320 KUTI NA, CROATIA, Tel.: +385 (44) 680 704