

EN




BARISTA
3in1 Multi Capsule
COFFEE MAKER



Read this important information carefully before you use the appliance and save it for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Before plugging the appliance in, make sure that the power it uses corresponds to your electrical supply system and that the outlet is earthed.

ANY ERROR IN THE ELECTRICAL CONNECTION WILL NEGATE YOUR GUARANTEE.


- This appliance is designed for domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility, and the guarantee will not apply.
- Unplug the appliance when you have finished using it and when you clean it.
- Do not use the appliance if it is not working properly or if it has been damaged. If this occurs, contact an authorized service center.
- All interventions other than cleaning and everyday maintenance by the customer must be performed by an authorized service center.
- Do not use the appliance if the power cord or plug is damaged. The power cord must be replaced by an authorized center to prevent any danger.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Do not leave the power cord within reach of children.
- The power cord must never be closed to or in contact with the hot parts of your appliance, near a source of heat or over a sharp edge.
- For the safety, only use the manufacturer's accessories and spare parts designed for this appliance.
- Do not pull on the cord to unplug the appliance.
- Never put your appliance on a hotplate.
- This appliance is intended to be used only in the household and similar applications such as:
 - Staff kitchen areas in shops, offices, and other working environments.
 - Farmhouses.
 - By clients in hotels, motels, and other residential type environments.
 - Bed and breakfast type environments.

SPECIAL INSTRUCTIONS:

- Children shall not play with the appliance.
- This appliance shall not be used by children.
- Keep the appliance and its cord out of reach of children


GENERAL DESCRIPTION:

COMPACT DESIGN

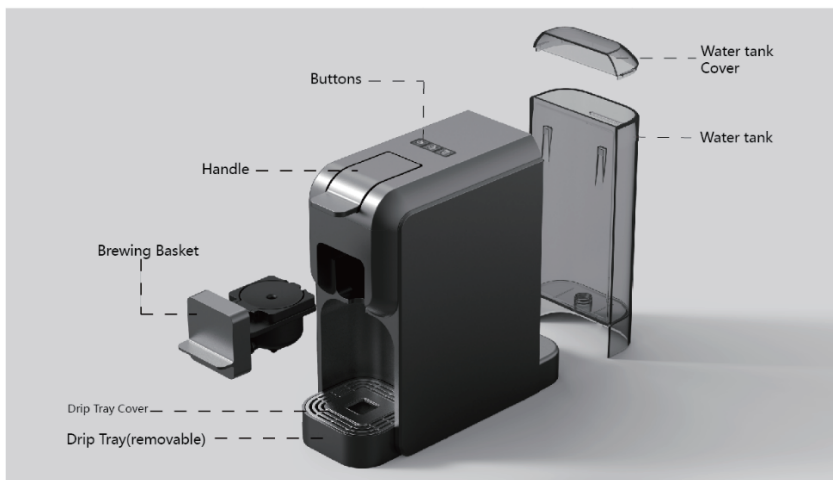

Explanation of control panel

Function Buttons:

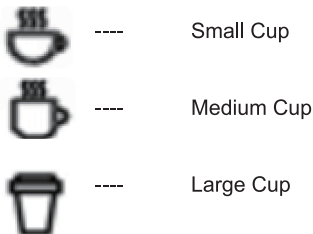

LED signals

All function buttons illuminated green: When the appliance is ready for operation; press any key for power on.

BEFORE THE FIRST USE

- Take the appliance and accessories out the box. Remove the stickers, protective foil, or plastic from the device.
- Place the device on a flat stable surface and ensure a minimum of 10cm free space around the device. This device is not suitable for installation in a cabinet or for outside use.

CAUTION:

Improper handling of electrical equipment is dangerous and can be lethal. Please pay attention to the safety precautions in this manual, in particular the following:

- Danger of scalding beware of hot water in a cabinet or for outside use.

WARNING!

- There is sharp needle upper the capsule adaptor. Do not put your hand or finger close to any part near the needle after the adaptor has been removed.
- Do not operate the machine with an empty water tank or water is less than MINIMUM level.
- Do not open the handle when the machine is brewing.
- Be careful, the adaptor can be very hot after brewing!
- Always pull out the power plug before cleaning the machine.
- Only use the machine in a dry room.
- Thoroughly rinse out the water tank with fresh water before using for the first time. Clean the machine using a damp cloth only.
- Children should be supervised to ensure that they do not play with the appliance.
- WARNING: The capsule holder must not be opened during use.
- The coffeemaker shall not be placed in a cabinet when in use
- The coffeemaker must be operated with the decorative door open or the cabinet door open.
- WARNING: Do not use the appliance if the surface is cracked.
- After the product is used, there is still residual heat on the surface of the heating element. Please cool it before cleaning to prevent burns.

SPECIAL INSTRUCTION:

There are two ways to fill the water tank: directly into the machine, by using for example a jug, or by removing the water tank.

1. Filing without removing the tank:

- Lift the water tank cover.
- Fill the tank with cold fresh water.
- The maximum capacity is 0.8 liter.
- Replace the tank cover.

2. Filing by removing the water tank:

- Hold the water tank tilted to remove it from the machine.
- Fill the tank up to Fill the tank up to the "MAX" mark with cold fresh water (the maximum capacity is 0.8 liter).
- Slide the water tank slowly on water tank base, when the water tank outlet is inserted in the inlet receptacle, push firmly to lock the water tank.

Before using for the first time or after long pauses (e.g., holidays), the machine must be flushed. This short procedure can thoroughly flush and clean the internal pipes.

- Press any function button to power on.
- The light of buttons will become steady on when the machine is heated up.
- Heating up time is approximately 35 seconds.
- Before pressing the button, make sure that:
 - The handle is closed without a capsule inside.
 - The water tank is full.
 - The water tank is firmly in place, otherwise water may leak.
- A large bowl (250ml size or above) is placed under the dispenser.
- Open the handle when the flushing process has finished.
- Empty the bowl.

ADAPTERS:

This machine uses multiple adapters, see below for information:

- 1.Nespresso Capsules adapter
- 2.Dolce Gusto capsules adapter
- 3.Coffee powder adapter

USE:

Nespresso® capsule

- Open the handle.
- Pull out the brewing basket for Nespresso® capsules.
- Insert a capsule to the brewing basket.
- Push in the brewing basket with capsule.
- Close the handle.
- Place a cup under the dispenser.
- Press the desired cup size button only once.
- The selected button will blink, and the machine will start brewing. When the brewing process is complete, dispensing will stop automatically when the default brewing volume is reached. This default setting volume can be adjusted to suit personal taste. Raise the handle and pull out the brewing basket to inject the used capsule into the container.
- After pressing the button, the desired button led flash a few seconds first, then the brewing will start. The flash process is for the heating, this is the normal procedure.



DOLCE-GUSTO® CAPSULE

- Open the handle.
- Pull out the brewing basket for Dolce-Gusto® capsules.
- Insert a capsule to the brewing basket.
- Push in the brewing basket with capsule.
- Close the handle.
- Place a cup under the dispenser.
- Press the desired cup size button only once.
- The selected button will blink, and the machine will start brewing. When the brewing process is complete, dispensing will stop automatically when the default brewing volume is reached. This default setting volume can be adjusted to suit personal taste. Raise the handle and pull out the brewing basket to inject the used capsule into the container.
- After pressing the button, the desired button led flash a few seconds first, then the brewing will start. The flash process is for the heating, this is the normal procedure.

COFFEE POWDER

- Open the handle.
- Pull out the brewing basket for coffee power.
- Place the coffee powder adapter into the brewing basket.
- Put the coffee powder into the adapter and push firmly.
- Push the brewing basket into the machine.
- Close the handle.
- Place a cup under the dispenser.
- Press the desired cup size button only once.
- The desired coffee button only once, the brewing process is complete, dispensing will stop automatically when the default brewing time is reached. This default setting time can be adjusted to suit personal taste.
- Raise the handle and pull out the brewing basket to inject the used coffee powder into the container.
- After pressing the button, the desired button led flash a few seconds first, then the brewing will start. The flash process is for heating, this is the normal procedure.

AUTOMATICALLY POWER-OFF FUNCTION








- The machine will automatically power off and go into energy saving mode when there is no operation within 9 minutes. Press any function button to activate the machine again.
- Coffee volume setting
- The amount of coffee can be changed by adjusting the default brewing time to suit personal taste.

PROGRAM-SUIT PERSONAL TASTE

Each coffee button can be programmed with a coffee volume for an individual cup size. The procedure for programming is the same for both coffee buttons.



Programmable volume range25 - 200 ml

Small cup		max 200 ml	
Middle cup		max 200 ml	
Large cup		max 200 ml	
	25 ml		

(1) Prepare coffee as usual (see user manual) but keep the coffee button pressed for at least 3 seconds to start programming mode.

(2) Only release the button when the desired fill level is reached.


RESTORE THE ORIGINAL FACTORY DEFAULT COFFEE CUP VOLUME SETTING

- Press all 3 buttons at the same time for 5 seconds in Ready State, 2 beeps.
- All the green led light flash for 5 seconds and back to the process "First use".
- the "First use" Mode will see the red-light flashing, so please keep the water tank not empty.
- Take out the capsule / ground coffee in brewing adapter.
- Put back the brewing adapter into the machine.
- Press the red-light button, the machine will fill up water.
- Let water come out until the red light (flashing) turn to green light (flashing).
- Machine will pre-heat around 35 seconds, the green light stop flashing, machine ready to brew again.



DESCALING PROCEDURE:

If all the button flash in red and green alternatively during the normal use, that's mean the machine needs to be descaling (see below picture).

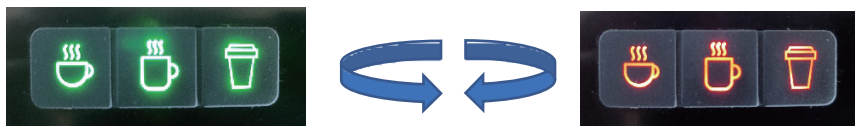

Green and red-light flash alternatively

DESCALING PREPARATION:

- Eject capsule or ground coffee from the adapter, re-insert the adapter into machine (please only insert the Nespresso adapter or the Ground coffee adapter for this process, other adapter is not suitable).
- Remove and empty the water tank.
- Place a container under the outlet (volume size: larger than 1-liter).
- Fill the water tank with the descaler solution, obtained by diluting the descaler provided with water (fill the water tank up to the MAX line), re-insert the water tank to machine.
- Plug-in the power cord of machine, press the small cup button and medium cup button at the same time for 5 seconds, small cup button lights on in green, large cup button flash in red and green alternatively, the machine is in descaling mode now (see below picture).



Press these two keys at the same time for 5 seconds

Large cup button flash in green/red alternatively

1ST DESCALING PHASE:

Step6: Press the small cup button, the small cup button green light off, large cup button keep flash in green/red alternatively.

Step7: At the same time, the machine start pumping some amount of water and stopped automatically, after waiting 2.5 minutes, the machine will pump and wait again, totally repeat 8 times.

Step8: After 8 times pump and wait, machine will keep pumping water until water tank is empty, 1st descaling phase finished. Large cup button keep flash in green/red alternatively.

2ND DESCALING PHASE:

Step9: Remove and clean the water tank, fill with fresh water up to the MAX line again, re-insert to the machine.

Step10: Remove and clean the brew adapter, re-insert to the machine.

Step11: At this moment, the medium cup button lights on in green, large cup button flash in red and green alternatively (flashing faster than the 1st phase), the machine is into the 2nd phase.



Step9: Remove and clean the water tank, fill with fresh water up to the MAX line again, re-insert to the machine.

Step10: Remove and clean the brew adapter, re-insert to the machine.

Step11: At this moment, the medium cup button lights on in green, large cup button flash in red and green alternatively (flashing faster than the 1st phase), the machine is into the 2nd phase.

POWER OFF SETTING

Press Small Cup button + Large Cup button at the same time, then the machine will power off.

FACTORY DEFAULT SETTING

Totally reset of the machine:

- Step1: Switch OFF machine (plug out) and open handle
- Step 2: Press and Hold Small cup and medium cup buttons
- Step 3: Switch on (plug in), Beep once
- Step 4: Release the buttons
- Step 5: Close the handle, Beep twice
- Step 6: Press Small cup medium cup +Large Cup these three buttons, long "Beep"
- Step 7: To quit switch OFF machine (plug out)
- Step 8: Turn on the machine (plug in); press any button, start from First use procedure.

"First Use" Mode to normal work

● The "First use" Mode will see the red-light flashing, so please keep the water tank not empty.

● Take out the capsule / ground coffee in brewing adapter.

● Put back the brewing adapter into the machine.

● Press the red-light button, the machine will fill up water.

● Let water come out until the red light (flashing) turn to green light (flashing).

● Machine will pre-heat around 35 seconds, the green light stop flashing, machine ready to brew again.



TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
No coffee is brewed	-The water tank is empty.	-Fill the water tank.
The coffee is not hot enough	-Cups/ mugs are cold. -Scale build-up in machine. -Cold machine.	-Preheat cup /mug. -Descale. -Brewing a cup of water to warm up the circuit.
Water on table	-Water tank is leaking. -Drip tray full of water.	-Check if the valve on water tank is stuck. -Empty the drip tray.
Handle cannot close	-The brewing basket is not placed well.	-Push the brewing basket into correct position.
**RED light flashing	-1.If the water tank empty. -2.If the machine lacks water. -3.After the machine factory default setting	-Solve the red-light flashing -Step1: Fill up the water tank. -Step2: Take out the capsule / ground coffee in brewing adapter. -Step3: Put back the brewing adapter into the machine. -Step4: Press the red-light button, the machine will fill up water. -Step5: Let water come out until the red light (flashing) turn to green light (flashing). -Step6: Machine will pre-heat around 35 seconds, the green light stop flashing, machine ready to brew again.

SPECIFICATIONS

Rated voltage	220-240V
Rated power	1150-1350W
Water Tank Capacity	800ml
Programmable Cup Size	50ml / 100ml / 150ml
Auto Shut Off	9 minutes
Water pump pressure	15 bar

ENVIRONMENT FRIENDLY DISPOSAL



Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

This Coffee machine are intended for household use only



BARISTA

3in1 Multi Capsule
COFFEE MAKER



Pažljivo pročitajte ove važne informacije prije korištenja uređaja
i sačuvajte ih za buduću upotrebu.

VAŽNE MJERE ZAŠTITE

Pri korištenju električnih uređaja uvijek se trebaju pridržavati osnovnih sigurnosnih mjera kako bi se smanjio rizik od požara, strujnog udara i/ili ozljeda osoba, uključujući sljedeće:

- Ovaj uređaj nije namijenjen za korištenje od strane osoba (uključujući djecu) sa smanjenim fizičkim, osjetilnim ili mentalnim sposobnostima, ili nedostatkom iskustva i znanja, osim ako su pod nadzorom ili su upućeni u vezi s korištenja uređaja od strane osobe odgovorne za njihovu sigurnost. Djecu treba nadzirati kako bi se osiguralo da se ne igraju s uređajem.
- Prije nego što uključite uređaj, provjerite odgovara li napon u el. mreži nazivnom naponu na kojem radi uređaj i da li je utičnica uzemljena.

SVAKO POGREŠNO POVEZIVANJE UREĐAJA NA ELEKTRIČNU MREŽU ĆE PONIŠITI VAŠE JAMSTVO.


- Ovaj uređaj je namijenjen samo za kućnu upotrebu. Za bilo kakvu komercijalnu uporabu, neprikladnu uporabu ili nepridržavanje uputa, proizvođač ne prihvaća nikakvu odgovornost i jamstvo se ne primjenjuje.
- Isključite uređaj iz struje kada završite s korištenjem i kada ga čistite.
- Nemojte koristiti uređaj ako ne radi ispravno ili je oštećen. Ako se to dogodi, obratite se ovlaštenom servisu.
- Sve zahvate osim čišćenja i svakodnevnog održavanja od strane kupca mora obavljati ovlašteni servis.
- Nemojte koristiti uređaj ako je strujni kabel ili utikač oštećen. Kabel za napajanje mora zamijeniti ovlašteni centar kako bi se spriječile bilo kakve opasnosti.
- Nemojte uranjati uređaj, kabel za napajanje ili utikač u vodu ili bilo koju drugu tekućinu.
- Ne ostavljajte kabel za napajanje u dohvatu djece.
- Kabel za napajanje nikada ne smije biti zatvoren ili u dodiru s vrućim dijelovima vašeg uređaja, u blizini izvora topline ili preko nekog oštrog ruba.
- Radi sigurnosti, koristite samo dodatke i rezervne dijelove proizvođača namijenjene za ovaj uređaj.
- Nemojte povlačiti kabel kako biste isključili uređaj.
- Nikada ne stavljajte uređaj na grijaću ploču.
- Ovaj uređaj je namijenjen samo za korištenje u kućanstvu i sličnim primjenama kao:
 - Kuhinjski prostori za osoblje u trgovinama, uređima i drugim radnim okruženjima.
 - Seoske kuće.
 - Od strane klijenata u hotelima, motelima i drugim stambenim sredinama.
 - U sobama koje su namijenjene za prenoćište ili restoranima.

POSEBNE UPUTE:

- Djeca se ne smiju igrati s uređajem.
- Ovaj uređaj ne smiju koristiti djeca.
- Držite uređaj i njegov kabel izvan dohvata djece

POSEBNE UPUTE:

KOMPAKTAN DIZAJN

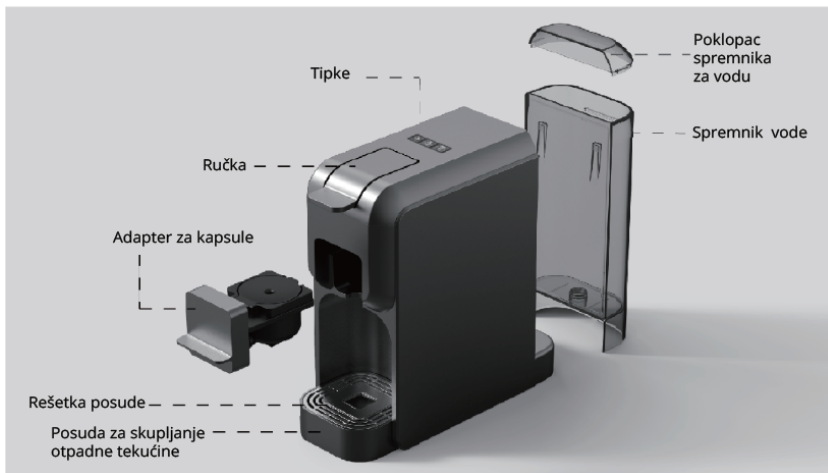

Objašnjenje upravljačke ploče

Funkcijski gumbi



Mala šalica



Srednja šalica



Velika šalica



LED indikacija

Svi funkcijski gumbi svijetle zeleno: kada je uređaj spreman za rad; pritisnite bilo koju tipku za uključivanje.

PRIJE PRVE UPOTREBE

- Izvadite uređaj i pribor iz kutije. Uklonite naljepnice, zaštitnu foliju ili plastiku s uređaja.
- Postavite uređaj na ravnu stabilnu površinu i osigurajte najmanje 10 cm slobodnog prostora oko uređaja. Ovaj uređaj nije prikladan za ugradnju u ormar ili za vanjsku upotrebu.

OPREZ:

Nepravilno rukovanje električnom opremom je opasno i može biti smrtonosno. Obratite pozornost na sigurnosne mjere u ovom priručniku, posebno na sljedeće:

- Opasnost od opekline, pazite na vruću vodu.

UPOZORENJE!

- Na vrhu adaptera za kapsulu nalazi se oštra igla. Nemojte stavljati ruku ili prst blizu bilo kojeg dijela u blizini igle nakon uklanjanja adaptera.
- Nemojte koristiti stroj s praznim spremnikom za vodu ili ako je razina vode niža od MINIMALNE razine.
- Ne otvarajte ručicu dok aparat toči.
- Budite oprezni, adapter može biti vrlo vruć nakon kuhanja!
- Uvijek izvucite utikač prije čišćenja stroja.
- Koristite stroj samo u suhoj prostoriji.
- Temeljito isperite spremnik za vodu svježom vodom prije prve uporabe. Uređaj čistite samo vlažnom krpom.
- Djecu treba nadzirati kako se ne bi igrala s uređajem.
- UPOZORENJE: Držać kapsule ne smije se otvarati tijekom uporabe.
- Aparat za kavu ne smije se stavljati u ormarić kada se koristi
- Aparat za kavu mora raditi s otvorenim ukrasnim vratima ili otvorenim vratima ormarića.
- UPOZORENJE: Nemojte koristiti uređaj ako je površina napuknuta.
- Nakon upotrebe proizvoda, na površini grijaćeg elementa još uvijek postoji zaostala toplota. Ohladite ga prije čišćenja kako biste spriječili opekline.

POSEBNE UPUTE:

Spremnik za vodu možete napuniti na dva načina: izravno u stroj, pomoću na primjer vrča ili uklanjanjem spremnika za vodu.

1. Punjenje vodom bez skidanja spremnika:

- Podignite poklopac spremnika za vodu.
- Napunite spremnik hladnom svježom vodom.
- Maksimalni kapacitet je 0,8 litara.
- Vratite poklopac spremnika.

2. Punjenje vodom uklanjanjem spremnika:

- Držite spremnik za vodu nagnut kako biste ga izvadili iz stroja.
- Napunite spremnik do oznake "MAX" hladnom svježom vodom (maksimalni kapacitet je 0,8 litara).
- Lagano gurnite spremnik za vodu na postolje spremnika za vodu, kada je izlazni otvor spremnika za vodu umetnut u ulazni spremnik, čvrsto pritisnite da zaključate spremnik za vodu.

Prije prve uporabe ili nakon dugih pauza (npr. praznici), stroj je potrebno isprati. Ovim kratkim postupkom mogu se temeljito isprati i očistiti unutarnje cijevi.

- Pritisnite bilo koju funkcijsku tipku za uključivanje.
- Svjetlo tipki će svijetliti postojano kada se stroj zagrije.
- Vrijeme zagrijavanja je približno 35 sekundi.
- Prije pritiskanja gumba provjerite sljedeće:
- Ručka je zatvorena bez kapsule unutra.
- Spremnik za vodu je pun.
- Spremnik za vodu je čvrsto postavljen, inače bi voda mogla iscuriti.
- Velika zdjela (veličine 250 ml ili više) postavljena je ispod dozatora.
- Otvorite ručku kada je proces ispiranja završen.
- Ispraznite posudu.

ADAPTERI:

Ovaj stroj koristi više adaptera, pogledajte dolje za informacije:

1. Adapter za Nespresso kapsule
2. Adapter za Dolce Gusto kapsule
3. Adapter za mljevenu kavu

PRIPREMA KAVE:

Nespresso® kapsule:

- Otvorite ručku.
 - Izvucite adapter za kuhanje Nespresso® kapsula.
 - Umetnite kapsulu u adapter za kuhanje.
 - Gurnite adapter za kuhanje s kapsulom.
 - Zatvorite ručku.
 - Stavite šalicu ispod dozatora.
 - Pritisnite gumb željene veličine šalice samo jednom.
 - Odabrani gumb će treperiti, a aparat će započeti ispuštanje. Kada je proces kuhanja završen, točenje će se automatski zaustaviti kada se postigne zadana količina.
- Ova zadana postavka količine može se podesiti prema osobnom ukusu. Podignite ručku i izvucite adapter za kuhanje kako biste ubrizgali iskorištenu kapsulu u spremnik.
- Nakon pritiska na gumb, željena LED tipka treperi nekoliko sekundi, a zatim će započeti točenje. Proces treperenja LED svjetla je za grijanje, ovo je normalan postupak.



DOLCE-GUSTO® kapsule:

- Otvorite ručku.
 - Izvucite adapter za kuhanje Dolce-Gusto® kapsula.
 - Umetnite kapsulu u adapter za kuhanje.
 - Gurnite adapter za kuhanje s kapsulom.
 - Zatvorite ručku.
 - Stavite šalicu ispod dozatora.
 - Pritisnite gumb željene veličine šalice samo jednom.
 - Odabrani gumb će treperiti, a aparat će započeti ispuštanje. Kada je proces kuhanja završen, točenje će se automatski zaustaviti kada se postigne zadana količina.
- Ova zadana postavka količine može se podesiti prema osobnom ukusu. Podignite ručku i izvucite adapter za kuhanje kako biste ubrizgali iskorištenu kapsulu u spremnik.
- Nakon pritiska na gumb, željena LED tipka treperi nekoliko sekundi, a zatim će započeti točenje. Proces treperenja LED svjetla je za grijanje, ovo je normalan postupak.

MLJEVENA KAVA

- Otvorite ručku.
- Izvucite adapter za kuhanje mljevene kave.
- Stavite metalnu posudicu za mljavenu kavu u adapter za kuhanje.
- Stavite kavu u prahu u metalnu posudicu i čvrsto pritisnite priručnim plastičnim dijelom.
- Gurnite adapter za kuhanje u aparat.
- Zatvorite ručku.
- Stavite šalicu ispod dozatora.
- Pritisnite gumb željene veličine šalice samo jednom.
- Točenje će se automatski zaustaviti kada se postigne zadano vrijeme kuhanja. Ovo zadano vrijeme može se podešeti prema osobnom ukusu.
- Podignite ručku i izvucite adapter za kuhanje kako biste ubrizgali iskorištenu kavu u prahu u spremnik.
- Nakon pritiska na tipku, željena LED tipka treperi nekoliko sekundi. tada će početi kuhanje. Proces bljeskalice je za zagrijavanje, ovo je normalan postupak.

FUNKCIJA AUTOMATSKOG ISKLJUČIVANJA

- Stroj će se automatski isključiti i prijeći u način rada za uštedu energije ako se ne koristi 9 minuta. Pritisnite bilo koju funkcijsku tipku za ponovno aktiviranje stroja.
- Podešavanje količine kave
- Količina kave može se promijeniti podešavanjem zadanog vremena kuhanja prema osobnom ukusu.

PROGRAMABILNE TIPKE

Svaki gumb za kavu može se programirati s količinom kave za pojedinačnu veličinu šalice. Postupak programiranja je isti za oba gumba za kavu.



Programabilni raspon volumena 25 - 200 ml

Mala šalice		max 200 ml	
Srednja šalice		max 200 ml	
Velika šalice		max 200 ml	
	25 ml		

(1) Pripremite kavu kao i obično (pogledajte korisnički priručnik), ali držite tipku za kavu pritisnutu najmanje 3 sekunde za početak načina programiranja.

(2) Pustite tipku tek kada se postigne željena razina punjenja.


VRATITE IZVORNU TVORNIČKI ZADANU POSTAVKU VELIČINE/VOLUMENA ŠALICE KAVE

- Pritisnite sva 3 gumba istovremeno na 5 sekundi u stanju Ready Stanje, 2 zvučna signala.
- Sva zelena LED svjetla trepere 5 sekundi i vraćaju se na proces "Prva uporaba".
- u načinu "Prva uporaba" crveno svjetlo će treperiti, pa vas molimo pazite da spremnik za vodu ne bude prazan.
- Izvadite kapsulu/mljevenu kavu u adapteru za kuhanje.
- Vratite adapter za kuhanje u aparat.
- Pritisnite gumb s crvenim svjetlom, stroj će napuniti vodu.
- Pustite da voda izlazi sve dok se crveno trepteće svjetlo ne pretvori u zeleno trepteće svjetlo.
- Aparat će se prethodno zagrijati oko 35 sekundi, zeleno svjetlo prestaje treperiti, aparat je spreman za ponovno kuhanje.



POSTUPAK UKLANJANJA KAMENCA:

Ako tijekom normalne uporabe svi gumbi naizmjenice trepere crveno i zeleno, to znači da aparat treba ukloniti kamenac (pogledajte sliku ispod).

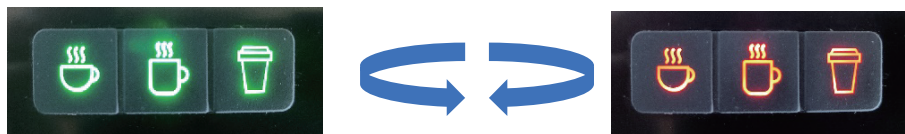

Naizmjenice treperi zeleno i crveno svjetlo

PRIPREMA ZA UKLANJANJE KAMENCA:

- Izbacite kapsulu ili mljevenu kavu iz adaptera, ponovno umetnite adapter u aparat (za ovaj postupak umetnite samo adapter za Nespresso® ili adapter za mljevenu kavu, drugi adapter nije prikladan).
- Izvadite i ispraznite spremnik za vodu.
- Stavite posudu ispod izlaza (veličina volumena: veća od 1 litre).
- Napunite spremnik za vodu otopinom za uklanjanje kamenca, dobivenu razrjeđivanjem sredstva za uklanjanje kamenca koje ste dobili s vodom (napunite spremnik za vodu do linije MAX), ponovno umetnite spremnik za vodu u stroj.
- Uključite kabel za napajanje stroja, istovremeno pritisnite gumb za malu šalicu i gumb za srednju šalicu na 5 sekundi, gumb za malu šalicu svijetli zeleno, gumb za veliku šalicu naizmjenično treperi crveno i zeleno, aparat je sada u postupku uklanjanja kamenca (pogledajte sliku ispod).



Pritisnite ove dvije tipke u isto vrijeme i zadržite 5 sekundi



LED na tiki s velikom šalicom naizmjenično trepti crveno/zeleno

1. FAZA UKLANJANJA KAMENCA:

Korak 6: Pritisnite gumb za malu šalicu, zeleno svjetlo gumba za malu šalicu isključeno, gumb za veliku šalicu naizmjenično treperi zeleno/crveno.

Korak 7: U isto vrijeme, stroj počinje pumpati određenu količinu vode i automatski se zaustavlja, nakon čekanja 2,5 minute, stroj će pumpati i ponovno čekati, potpuno ponoviti 8 puta.

Korak 8: Nakon 8 puta pumpanja i čekanja, stroj će nastaviti pumpati vodu dok se spremnik za vodu ne isprazni, prva faza uklanjanja kamenca ne završi. Gumb za veliku šalicu naizmjenično svijetli zeleno/crveno.

2. FAZA UKLANJANJA KAMENCA:

Korak 9: Uklonite i očistite spremnik za vodu, ponovno ga napunite svježom vodom do linije MAX, ponovno umetnite u stroj.

Korak 10: Uklonite i očistite adapter za kavu, ponovno umetnite u aparat.

Korak 11: U ovom trenutku, srednji gumb za šalicu svijetli zeleno, veliki gumb za šalicu naizmjenično treperi crveno/zeleno (treperi brže od 1. faze), aparat je u 2. fazi.



Korak 12: Pritisnite gumb za srednju šalicu, zeleno svjetlo gumba za srednju šalicu se gasi, gumb za veliku šalicu naizmjenično svijetli zeleno/crveno.

Korak 13: U isto vrijeme, stroj će nastaviti pumpati vodu, automatski će se zaustaviti kad napumpa oko 600 ml vode.

Korak 14: Sva svjetla su isključena, 2. faza uklanjanja kamenca je završena, svi postupci uklanjanja kamenca su završeni.

Korak 15: Sada pritisnite bilo koju tipku, stroj će se vratiti u normalu.

POSTAVKA ISKLJUČENJA

Istovremeno pritisnite gumb za malu šalicu + gumb za veliku šalicu, a zatim će se uređaj isključiti.

TVORNIČKI ZADANE POSTAVKE

Potpuno resetiranje stroja:

- Korak 1: Isključite stroj (išteckajte iz utičnice) i otvorite ručku
- Korak 2: Pritisnite i držite gumb za malu i srednju šalicu
- Korak 3: Uključite (ušteckajte u utičnicu), oglasit će se jedan zvučni signal
- Korak 4: Otpustite gumb
- Korak 5: Zatvorite ručicu, oglasit će se dva zvučna signala
- Korak 6: Pritisnite Mala šalice, srednja šalice + Velika šalice ova tri gumba, dugi "Beep"
- Korak 7: Za prekid ISKLJUČITE stroj (išteckajte iz utičnice)
- Korak 8: Uključite stroj (ušteckajte u utičnicu); pritisnite bilo koju tipku, krenite od postupka prve uporabe.

Način "Prva uporaba" za normalan rad

• U načinu rada "Prva uporaba" crveno svjetlo će treptati, stoga neka spremnik za vodu ne bude prazan.

• Izvadite kapsulu/mljevenu kavu u adapteru za kuhanje.

• Vratite adapter za kuhanje u aparat.

• Pritisnite gumb s crvenim svjetlom, stroj će napuniti vodu.

• Pustite da voda izlazi sve dok se crveno svjetlo (treperi) ne pretvori u zeleno svjetlo (treperi).

• Aparat će se prethodno zagrijati oko 35 sekundi, zeleno svjetlo prestaje treperiti, aparat je spreman za ponovno kuhanje.



RJEŠAVANJE PROBLEMA

PROBLEM	UZROK	RJEŠENJE
Kava se ne kuha	- Spremnik za vodu je prazan.	- Napunite spremnik za vodu.
Kava nije dovoljno vruća	- Šalice/ šalice su hladne. - Nakupljanje kamenca u stroju. - Hladna mašina.	- Prethodno zagrijte šalicu/šalicu. - Očistite stroj od kamenca. - Skuhajte šalicu vode za zagrijavanje kruga.
Voda na stolu	- Spremnik za vodu curi. - Posuda za kapanje puna vode.	- Provjerite je li ventil na spremniku za vodu zaglavljen. - Ispraznite posudu za skupljanje tekućine.
Ručka se ne može zatvoriti	- Košara za kuhanje nije dobro postavljena.	- Gurnite košaru za kuhanje u ispravan položaj.
**CRVENO svjetlo treperi	1. Ako je spremnik za vodu prazan. 2. Ako stroju nedostaje vode. 3. Nakon tvorničke zadane postavke stroja -Riješite bljeskanje crvenog svjetla	Korak 1: Napunite spremnik za vodu. Korak 2: Izvadite kapsulu / mljevenu kavu u adapteru za kuhanje. Korak 3: Vratite adapter za kuhanje u aparat. Korak 4: Pritisnite gumb s crvenim svjetlom, stroj će napuniti vodu. Korak 5: Pustite da voda izlazi dok se crveno svjetlo (treperi) ne pretvori u zeleno svjetlo (treperi). Korak 6: Aparat će se prethodno zagrijati oko 35 sekundi, zeleno svjetlo prestaje treperiti, aparat je spreman za ponovno kuhanje.

TEHNIČKI PODACI

Nazivni napon	220-240V
Nazivna snaga	1150-1350W
Spremnik za vodu Kapacitet	800ml
Programabilna veličina šalice	50ml / 100ml / 150ml
Automatsko isključivanje	9 min
Pritisak vodene pumpe	15 bar

ZBRINJAVANJE ELEKTRONSKOG OTPADA



Ne bacajte uređaj s uobičajenim mješovitim kućnim otpadom na kraju njegovog vijeka trajanja, već ga predajte na službenom sabirnom mjestu za recikliranje. Time pomažete očuvanju okoliša.



Ovaj aparat za kavu namijenjen je samo za upotrebu u kućanstvu.

WARRANTY CARD / JAMSTVENI LIST

ITEM/MODEL:

Naziv/model proizvođa:

RECEIPT NO. / DATE OF PURCHASE:

Broj i datum računa:

SELLING SPOT (COMPANY):

Prodajno mjesto:

THE CUSTOMER:

Kupac:

WARRANTY PERIOD

(MONTHS):

Jamstveni rok

(Mjeseći):

36

SIGNATURE / STAMP:

Potpis i pečat:

All SBOX products are examined and tested after each stage of the production process and have all the required certificates (EMC, CE...). The products are subject to the following warranty conditions: • The warranty period for SBOX products is 36 months (on batteries 6 months) and begins on the day of being sold in the store • The warranty can only be claimed upon presentation of the original purchase invoice and a filed warranty paper with a stamp from the store it was bought at, and if the product has original packaging and all components and equipment • All malfunctioning of the product resulting from factory defects, that occur during the warranty period, and in the normal use of the product in compliance with all instructions will be removed. This warranty covers only defects in material and production. • If the product malfunctions during the warranty period, your SBOX distributor will give you the product (after which is checked by a professional) repaired or replaced • If the repair at the authorized service center is not completed within 30 days of being received at the service center, we will replace the product with a new one. If the repair during the warranty period lasts longer than 15 days, the warranty period is extended by as many days as the repair lasted. • If the device needs to be repaired within the warranty period, contact the store where you bought the product. If the product has to be sent to an authorized service center or general distributor, please send the product (with all parts and accessories) in the original packaging and with all the necessary documents (invoice, warranty card, etc.). The product can be repaired only in the authorized service center of the importer. The costs of shipping the product to the service center are funded by the customer. Possible damage to the product that can occur during transport is at the expense and risk of the buyer. Sending the product from the service center to the customer is funded by the service technician/the importer. This warranty does NOT cover: • Damage or malfunctions that would occur as a result of incorrect connection, incorrect polarization, incorrect battery placement, etc. • Defects caused by improper handling of products, use of parts or equipment that is not prescribed by our specifications, unauthorized product modification, and defects mechanical damage to the product • Defects that can occur due to product fall, use of force, natural disasters (flood, fire, thunder, earthquake...), due to battery leakage, due to unstable 220V voltage, frequent variations and/or power outages, etc. • Damage caused during transport to the customer • Products that have been opened or repaired by an unauthorized person • Parts that are considered consumables such as batteries, etc.

Svi SBOX proizvodi su provjereni i testirani nakon svake faze proizvodnog procesa te imaju sve potrebne certifikate (EMC, CE...) te podliježu sljedećim jamstvenim uvjetima: • Jamstveni rok na SBOX proizvode je 36 mjeseci (na baterije 6 mj.) i počinje teći danom prodaje u trgovini • Jamstvo se može ostvariti samo uz predočenje originalnog računa o kupnji i uredno popunjenog jamstvenog lista sa žigom trgovine, te ako proizvod ima originalnu ambalažu i sve sastavne dijelove i opremu. • Svi nedostaci i kvarovi koji su posljedica tvorničkih grešaka i koji su nastali u jamstvenom roku i pri normalnoj uporabi proizvoda i pri poštanju svih naputaka će biti otklonjeni. Ovo jamstvo obuhvaća samo greške nastale u materijalu i izradi. • Ako se proizvod pokvari tijekom jamstvenog roka, Vaš SBOX distributer će Vam proizvod popraviti ili zamijeniti nakon što ga provjeri stručna osoba • Ako popravak u ovlaštenom servisu nije izvršen u roku 30 dana od primitka u servis, proizvod ćemo zamijeniti novim. U slučaju da popravak u jamstvenom roku traje duže od 15 dana, jamstveni rok se produžuje za onoliko dana koliko je popravak trajao. • Ako se ukaže potreba popravka uređaja u jamstvenom roku, kontaktirajte trgovinu u kojoj ste proizvod i kupili. Ako proizvod treba poslati ovlaštenom servisu ili generalnom distributeru, molimo Vas da kompletan proizvod (sa svim dijelovima i opremom) bude zapakiran u originalnu ambalažu te da priložite sve potrebne dokumente (račun i ovjereni jamstveni list). Popravak aparata vrši se isključivo u ovlaštenom servisu uvoznika. Troškove prijevoza proizvoda na servis snosi kupac. Kupac preuzima rizik za moguća oštećenja tijekom prijevoza. Slanje proizvoda od servisa do kupca snosi serviser tj. uvoznik. Ovo jamstvo NE obuhvaća: • Oštećenja ili kvarove koji su nastali kao posljedica nepravilnog priključivanja, krive polarizacije, pogrešnog stavljanja baterija i sl. • Kvarove nastale zbog nepropisanog rukovanja proizvodom, korištenja dijelova ili opreme koja nije propisana našim specifikacijama, neovlaštenog modificiranja proizvoda te kvarove nastale mehaničkim oštećenjem proizvoda • Kvarove koji mogu nastati uslijed pada proizvoda, uporabe sile, više sile tj. elementarnih nepogoda (poplava, požar, grom, potres...), uslijed curenja baterije, uslijed nestabilnog 220V napona, čestih varijacija i/ili nestanaka struje i sl. • Oštećenja nastala pri prijevozu do kupca • Proizvod koji je otvoren i/ili popravljan od strane neovlaštene osobe • Dijelove koji se smatraju potrošnicima kao što su baterije i sl.

