



ESL-K1 KODACHI

PROFESSIONAL GAMING KEYBOARD

Keys function:

1. Supports 13 backlight modes, press FN + INS to switch.
2. Programmed game mode LED backlight
 - FN + 1 = Game mode 1 (FPS) - ESC, A, S, D, W, ↑, ↓, ←, → keys lighting on
 - FN + 2 = Game mode 2 (CF) - F1-F3, 1-5, Q, W, E, R, A, S, D, G, B, Ctrl, Shift, Alt, Space, Tab, Ins, Del, Home, End keys lighting on
 - FN + 3 = Game mode 3 (COD) - 1-7, Q, W, E, R, T, A, S, D, F, G, C, V, Ctrl, Shift keys lighting on
 - FN + 4 = Game mode 4 (LOL) - 1-7, Q, W, E, R, A, S, D, F keys lighting on
 - FN + 5 = Game Mode 5 (QQ race)- W, R, A, S, D, Ctrl, Alt, Shift, ↑, ↓, ←, → keys lighting on

Mentioned predefined backlighting modes can be customized or you can create your own per-key RGB backlighting layout.

Programming the keys:

- FN + Home = Record the key
- FN + Home = Store the key

Personalizing key colors in the predefined modes:

Press FN + 1-5 to choose the mode you want to customize. Then press FN + HOME to enter self design mode, press the same key continuously until it shows you required color, and then set other key. After setting, press FN + HOME for storing. Press FN + ESC back to factory settings.

3. Multimedia keys (FN+F1-F12)

- FN + F1 = Media (Runs the application that is set as default media player)
- FN + F2 = Volume -
- FN + F3 = Volume +
- FN + F4 = Mute
- FN + F5 = Previous track
- FN + F6 = Next track
- FN + F7 = Play / Pause
- FN + F8 = CD Stop
- FN + F9 = Email
- FN + F10 = IE Search
- FN + F11 = My Computer
- FN + F12 = Calculator
- FN + WIN-L = Lock WIN and APP
- FN + " " = Increase LED brightness
- FN + " ↑ " = Decrease LED brightness
- FN + " ↓ " = Speed -
- FN + " ← " = Speed +
- FN + Ins = LED light switch mode
- FN + DEL = Switching 7 colors lights up by turn
- FN + Page UP = Switching multimedia keys lights
- FN + PRTSC = Turn off all lights.
- FN + ESC = Back to factory setting.



ESL-K1 KODACHI

PROFESSIONAL GAMING KEYBOARD

Funkcije tipki:

1. 13 različitih načina pozadinskog osvjetljenja, pritisnite FN + INS za prebacivanje.

2. Predefinirane osvijetljene tipke za pojedine igre

- FN + 1 = Game mode 1 (FPS) - Osvijetljene tipke: ESC, A, S, D, W, ↑, ↓, ←, →
- FN + 2 = Game mode 2 (CF) - Osvijetljene tipke: F1-F3, 1-5, Q, W, E, R, A, S, D, G, B, Ctrl, Shift, Alt, Space, Tab, Ins, Del, Home, End
- FN + 3 = Game mode 3 (COD) - Osvijetljene tipke: 1-7, Q, W, E, R, T, A, S, D, F, G, C, V, Ctrl, Shift
- FN + 4 = Game mode 4 (LOL) - Osvijetljene tipke: 1-7, Q, W, E, R, A, S, D, F
- FN + 5 = Game Mode 5 (QQ race) - Osvijetljene tipke: W, R, A, S, D, Ctrl, Alt, Shift, ↑, ↓, ←, →

Gornje predefinirani načini osvjetljenja mogu se nadopuniti po vlastitim željama ili možete sami kreirati koje tipke želite da budu osvijetljene i kojom bojom.

Način programiranja osvjetljenja tipki:

- FN + Home = Snimanje tipki
- FN + Home = Spremanje tipki

Personaliziranje boja tipki u bilo kojem od predefiniranih 5 Game modova:

Pritisnite FN + 1-5 za odabir predefiniranog moda koji želite prilagoditi. Nakon toga pritisnite FN + HOME da biste ušli u način rada za prilagođavanje tipki. Pritiskanjem tipke više puta izmjenjivat će se boja. Kada ste zadovoljni odabranim, prijedite na drugu tipku. Nakon što ste sve podesili po želji, pritisnite FN + HOME za spremanje. Pritiskom FN + ESC vraćate tipkovnicu na tvorničke postavke.

3. Multimedijalne skraćenice pomoću funkcijske tipke (FN + F1-F12)

- FN + F1 = Media (Pokreće aplikaciju koja je zadana za slušanje glazbe/filmova)
- FN + F2 = Glasnoća -
- FN + F3 = Glasnoća +
- FN + F4 = Mute
- FN + F5 = Prethodna pjesma
- FN + F6 = Sljedeća pjesma
- FN + F7 = Pokretanje/Pauza
- FN + F8 = CD Stop
- FN + F9 = Email
- FN + F10 = IE Tražilica
- FN + F11 = My Computer
- FN + F12 = Kalkulator
- FN + WIN-L = zaključavanje WIN tipke i APP
- FN + " ↑ " = Pojačavanje svjetline na tipkama
- FN + " ↓ " = Smanjivanje svjetline na tipkama
- FN + " ← " = Brzina izmjene boja svjetala na tipkama -
- FN + " → " = Brzina izmjene boja svjetala na tipkama +
- FN + Ins = Odabir 1 od 13 načina pozadinskog osvjetljenja
- FN + DEL = Odabir 1 od 7 boja pozadinskog osvjetljenja
- FN + Page UP = Odabir pozadinskog osvjetljenja multimedijalnih tipki
- FN + PRTSC = Gašenje pozadinskog osvjetljenja
- FN + ESC = Povratak na tvorničke postavke.