




# DAMARU BT RGB SPEAKER

## User manual - EN Upute - HR

### Function Description of Top Panel

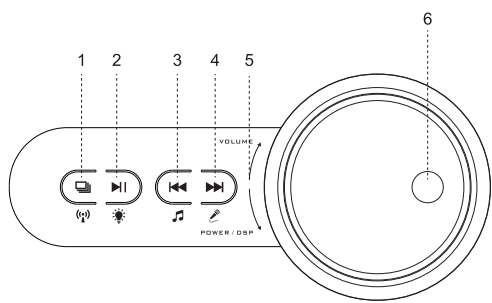

- 1. Mode/Broadcast**
  - Short press to switch the sound source mode: Bluetooth mode, USB mode, optical, AUX/line-in, FM mode.
  - Long press to disconnect the Bluetooth device in Bluetooth mode; long press to delete the FM station in FM mode.
  - Double press to turn on/off the broadcast mode.
- 2. Play&Pause/ Light effect**
  - Short press to play/pause the music.
  - Long press to search and save FM stations automatically in FM mode; long press to switch light effects (Total 5 light effects: red spectrum, green spectrum, flame effect, color-bar of rotation, color gradient) in modes other than the FM mode.
  - Double press to switch the light brightness levels. (Total 3 brightness levels)
- 3. Previous track/Echo -**
  - Short press to switch to last song or FM station.
  - Long press to search and play the last FM station in FM mode (with mic off); long press continuously to decrease the mic's echo in the state of mic-on.
  - Double press to choose the sound channel in broadcast mode; double press to switch the mic's sound effects in modes other than the broadcast mode.

- 4. Next track/Echo +**
  - Short press to switch to next song or FM station.
  - Long press to search and play the next FM station in FM mode(with mic off); long press continuously to increase the mic's echo in the state of mic-on;
  - Double press to turn on/off the mic mode.

EN-1


### 5. Status indicator light of the speaker

- Audio-source input indication: Bluetooth (blue), USB (red), optical (white), AUX (purple), FM (yellow) , MIC volume (green).

### 6. Potentiometer knob/ on&off/ Volume/ sound effect

- Long press to turn on/off the speaker.
- Turn clockwise or counterclockwise to adjust the song volume.
- Press once to enable the knob to adjust wireless mic's volume.
- Double press to switch sound effects (indoor, outdoor, music, movie, news).
- Long press and hold for 16seconds to restart the speaker.

### Function Description of Back Panel

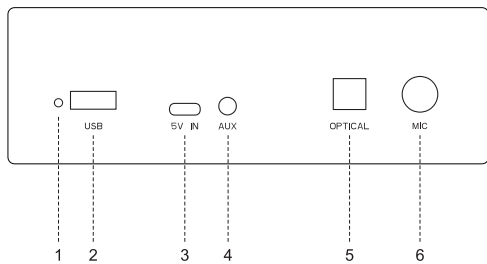

- 1.Charging indicator light**  
Normal charging - always on, charging completed - off, charging fault -flashing.
- 2. Socket of USB**  
The USB is supports for MP3, WMA, WAV, Ape, FLAC, etc.
- 3. Battery charging-port**  
External 5V/2A (or above) charger with a charging current of 2A, does not support fast charging.
- 4. AUX interface**
- 5. Optical input interface**
- 6. Microphone input port**  
It can be connected to wired microphone.

EN-2

### Bluetooth Mode

- Turn on the audio and automatically switch to Bluetooth mode by default. You will hear a voice of "Bluetooth Mode". During Bluetooth pairing, please keep the audio within a distance of 10 meters or less from the Bluetooth device. Different environments may affect the distance of signal transmission;
- Bluetooth device finds the audio and selects "DAMARU" from the list of found devices;
- After successful pairing, the audio will emit a voice of "Connected".
- Long press to disconnect the Bluetooth device in Bluetooth mode and the speaker will emit a voice of "Disconnected".

### USB Playback Mode

- When the audio was turned on, insert the USB drive into the USB port of the speaker, and the device will switch to USB mode and automatically play music.

### Optical Mode

- When the audio was turned on, insert the optical cable into the optical port of the audio. Then press the mode button and switch to the optical mode. After that you can play music.
- Note: please ensure that the volume of the source device, such as a CD player, is set to an appropriate level for optimal sound quality.

### Aux Mode

- Ensure the speaker is turned on.
- Plug one end of the aux cable into your mobile device.
- Insert the other end of the aux cable into the AUX port of the audio device. Then you can use your mobile device to control the music playback.

### FM Mode

- One end of the AUX cable must be inserted into the AUX port first and used as an antenna.**
- When the audio was turned on, switch to FM mode, short press the ►► & ◀◀ key to switch FM station;
- Long press the ►► key to automatically search and save FM stations.The indicator flashes yellow once channel searching

EN-3

### Mic Input

- Connection:** (Wired Microphone) Plug the wired mic into the appropriate input jack on the device.
- When the mic is successfully connected, there will emit a "Mic On" sound; when the microphone is disconnected, emits a "Mic Off" sound.
- Double press key also can toggle the mic.
- Volume adjustment:** Press once to enable the potentiometer knob to adjust the microphone volume. The green light flashes while adjusting the mic's volume. When the mic volume hits its limit, the green light will blink rapidly.
- Echo adjustment:** Long press continuously the ►► & ◀◀ keys to increase or decrease it.
- MIC sound effect switch:** Double press the key switch the Mic's sound effects (super reverb, KTV, original sound, popular, presenter).

### Broadcast Mode


- Select one device as the host and enable Bluetooth mode to play music. Once connected, double press button, and the host will enter broadcast mode with a "Broadcast Mode On" sound prompt and press the play button to play music.
- Other devices act as secondary units. In Bluetooth mode, double press the button on the secondary units to join the broadcast mode.
- Press once potentiometer to enable the knob to adjust wireless mic's volume.
- Double press the ◀◀ button to switch the audio channel(left channel: the indicator flashes white three times; right channel: flashes red three times; L+R channel: flashes green three times)
- Note:** The microphone is muted in broadcast mode. The microphone volume and echo can only be adjusted after exiting broadcast mode.
- Except for the power and channel switching functions, which can be operated on both the host and secondary units, all other functions can only be operated on the host.



If you need to dispose of this product in the future, please note: Waste electronic products should not be placed together with household waste. Please recycle and reuse them. Please contact local authorities or retailers for recycling advice.  
(WE&EEMO)

EN-4

### Opis funkcija gornje upravljačke ploče

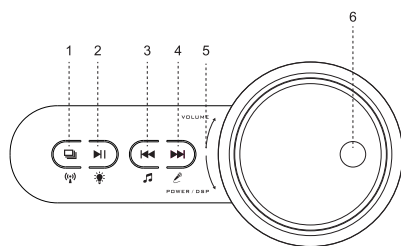

- 1. Načini rada/emitanje**
  - Kratko pritisnite za promjenu načina izvora zvuka: Bluetooth način, USB način, optički, AUX/linijski ulaz, FM način rada.
  - Dugi pritisak za odspajanje Bluetooth uređaja u Bluetooth načinu rada; dugo pritisnite za brisanje FM stanica u FM modu.
  - Dvapat pritisnite za uključivanje/isključivanje načina emitiranja.

- 2. Reprodukija i Pauza/ Svjetlosni efekt**
  - Kratko pritisnite za reprodukciju/pauziranje glazbe.
  - Dugo pritisnite za automatsko pretraživanje i spremanje FM postaja u FM načinu rada; dugo pritisnite za prebacite svjetlosne efekte (ukupno 5 svjetlosnih efekata: crveni spektar, zeleni spektar, efekt plamena, kolor-traka rotacije, gradijent boja) u načinima koji nisu FM način.
  - Dvapat pritisnite za promjenu razine svjetline. (Ukupno 3 razine svjetline)

- 3. Prethodna pjesma/Echo -**
  - Short press to switch to last song or FM station.
  - Long press to search and play the last FM station in FM mode (with mic off); long press continuously to decrease the mic's echo in the state of mic-on.
  - Double press to choose the sound channel in broadcast mode; double press to switch the mic's sound effects in modes other than the broadcast mode.

- 4. Next track/Echo +**
  - Kratko pritisnite za prebacivanje na posljednju pjesmu ili FM postaju.
  - Dugo pritisnite za traženje i reprodukciju posljednje FM postaje u FM načinu (s isključenim mikrofonom); dugi pritisak neprekidno za smanjivanje jake mikrofona u stanju uključenog mikrofona.
  - Dvapat pritisnite za odabir zvučnog kanala u načinu emitiranja; dvapat pritisnite za prebacivanje zvučnog efekta mikrofona u načinima koji nisu način emitiranja.

HR-1


### 5. Svjetlo indikatora statusa zvučnika

- Indikator ulaza audio izvora: Bluetooth (plavo), USB (crveno), optički (bijelo), AUX (ljubičasto), FM (žuto), glasnoća mikrofona (zeleno).

### 6. Gumb potencijometra/ uključivanje i isključivanje/ glasnoća/ zvučni efekt

- Dugo pritisnite za uključivanje/isključivanje zvučnika.
- Okrenite u smjeru kazaljke na satu ili suprotno od njega za podešavanje glasnoće pjesme.
- Pritisnite jednom kako biste omogućili gumb za podešavanje glasnoće bežičnog mikrofona.
- Dvapat pritisnite za promjenu zvučnih efekata (unutra, na otvorenom, glazba, film, vijesti).
- Dugo pritisnite i držite 16 sekundi za ponovno pokretanje zvučnika.

### Opis funkcija stražnje ploče

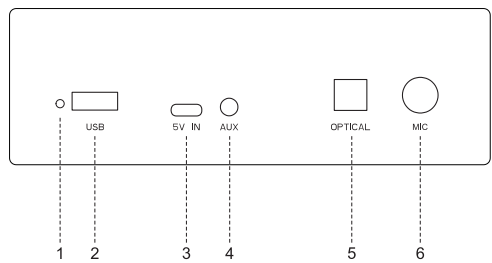

- 1. Svjetlo indikatora punjenja**  
Normalno punjenje - uvijek uključeno, punjenje završeno - isključeno, greška punjenja - treperi.
- 2. USB sučelje**  
USB podržava MP3, WMA, WAV, Ape, FLAC itd.
- 3. Priključak za punjenje baterije**  
Eksterni 5V/2A (ili jači) punjač sa strujom punjenja od 2A, ne podržava brzo punjenje.
- 4. AUX sučelje**
- 5. Optičko ulazno sučelje**
- 6. Ulazni priključak za mikrofoni**  
Može se spojiti na žičani mikrofoni.

HR-2

### Bluetooth način

- Uključite zvučnik i automatski se prebacite na Bluetooth način prema zadanim postavkama. Čut ćete glas "Bluetooth Mode". Tijekom Bluetooth uparivanja, držite zvučnik na udaljenosti od 10 metara ili manje od Bluetooth uređaja. Različita okruženja mogu utjecati na udaljenost prijennosa signala;
- Bluetooth uređaj pronalazi zvuk i odabire "DAMARU" s popisa pronađenih uređaja;
- Nakon uspješnog uparivanja, zvuk će emitirati glas "Connected".
- Dugo pritisnite za odspajanje Bluetooth uređaja u Bluetooth načinu rada i zvučnik će emitirati glas "Disconnected".

### USB način reprodukcije

- Kada je zvučnik uključen, umetnite USB pogon u USB priključak zvučnika i uređaj će se prebaciti u USB način rada i automatski reproducirati glazbu.

### Optički način

- Kada je zvučnik uključen, umetnite optički kabel u optički priključak audio uređaja. Zatim pritisnite gumb za način rada i prijedite na optički način rada. Nakon toga možete puštati glazbu.
- Napomena: provjerite je li glasnoća izvornog uređaja, poput CD playera, postavljena na odgovarajuću razinu za optimalnu kvalitetu zvuka.

### Aux način

- Provjerite je li zvučnik uključen.
- Uključite jedan kraj aux kabela u svoj mobilni uređaj.
- Umetnite drugi kraj pomoćnog kabela u AUX priključak audio uređaja. Tada možete koristiti svoj mobilni uređaj za upravljanje reprodukcijom glazbe.

### FM način

- Jedan kraj AUX kabela mora se prvo umetnuti u AUX priključak i koristiti kao antena.
- Kada je zvuk uključen, prebacite na FM način rada, kratko pritisnite tipku ►► i ◀◀ za promjenu FM postaje;
- Dugo pritisnite tipku ►► za automatsko pretraživanje i spremanje FM postaja. Indikator treperi žuto jednom prilikom traženja kanala

HR-3

### Mic ulaz

- Povezivanje: (žičani mikrofoni) Uključite žičani mikrofoni u odgovarajući ulazni priključak na uređaju.
- Kada je mikrofoni uspješno spojeni, oglasit će se zvuk "Mic On"; kada je mikrofoni isključeni, emitira zvuk "Mic Off".
- Dupli pritisak na također može prebaciti na mikrofoni.
- Podešavanje glasnoće:** Pritisnite jednom kako biste omogućili gumb potencijometra za podešavanje glasnoće mikrofona. Zeleno svjetlo treperi dok se podešava glasnoća mikrofona. Kada glasnoća mikrofona dosegne granicu, zeleno svjetlo će brzo treptati.
- Podešavanje odjeka:** Dugo pritisnite tipke ►► i ◀◀ za povećanje ili smanjenje.

- MIC prekidač za zvučne efekte:** Dvapat pritisnite tipku za promjenu zvučnih efekata mikrofona (super reverb, KTV, originalni zvuk, popularno, voditelj).

### Načini emitiranja

- Odaberite jedan uređaj kao domaćin i prvo omogućite Bluetooth način rada. Nakon uspješnog povezivanja dvapat pritisnite gumb i glavni zvučnik će ući u način rada emitiranja sa zvučnim upitom "Broadcast Mode On". Nakon toga pritisnite tipku play za puštanje glazbe.
- Ostali uređaji djeluju kao sekundarne jedinice. U Bluetooth načinu, dvapat pritisnite tipku na sekundarnim jedinicama da biste se pridružili načinu emitiranja.
- Pritisnite jednom potencijometar kako biste omogućili gumb za podešavanje glasnoće bežičnog mikrofona.
- Dvapat pritisnite gumb ◀◀ za promjenu audio kanala (lijevi kanal: indikator treperi bijelo tri puta; desni kanal: treperi crveno tri puta; L+R kanal: treperi zeleno tri puta)
- Napomena:** Mikrofoni su isključeni u načinu emitiranja. Glasnoća mikrofona i jeka mogu se podestiti tek nakon izlaska iz načina emitiranja.
- Osim funkcija napajanja i prebacivanja kanala, kojima se može upravljati i na glavnoj i na sekundarnoj jedinici, svim ostalim funkcijama može se upravljati samo na glavnom uređaju.



Ako u buduću trebate odložiti ovaj proizvod, imajte na umu: Otpadni električni proizvodi ne smiju se odlagati zajedno s kućnim otpadom. Molimo vas da ih reciklirate i ponovno upotrijebite. Obratite se lokalnim vlastima ili trgovcima za savjet o recikliranju.  
(MI&EEMO)

HR-4

## WARRANTY CARD / JAMSTVENI LIST

ITEM/MODEL: Naziv/model proizvoda:	
RECEIPT NO. / DATE OF PURCHASE: Broj i datum računa:	
SELLING SPOT (COMPANY): Prodajno mjesto:	
THE CUSTOMER: Kupac:	
WARRANTY PERIOD (MONTHS): Jamstveni rok (Mjeseci):	<b>36</b>
SIGNATURE / STAMP: Potpis i pečat:	

All White Shark products are examined and tested after each stage of the production process and have all the required certificates (EMC, CE...). The products are subject to the following warranty conditions: - The warranty period for White Shark products is 36 months (on batteries 6 months) and begins on the day of being sold in the store. - The warranty can only be claimed upon presentation of the original purchase invoice and a filed warranty paper with a stamp from the store it was bought at, and if the product has original packaging and all components and equipment. - All malfunctioning of the product resulting from factory defects, that occur during the warranty period, and in the normal use of the product in compliance with all instructions will be removed. This warranty covers only defects in material and production. - If the product malfunctions during the warranty period, your White Shark distributor will give you the product (after which is checked by a professional) repaired or replaced. - If the repair at the authorized service center is not completed within 30 days of being received at the service center, we will replace the product with a new one. If the repair during the warranty period lasts longer than 15 days, the warranty period is extended by as many days as the repair lasted. - If the device needs to be repaired within the warranty period, contact the store where you bought the product. If the product has to be sent to an authorized service center or general distributor, please send the product (with all parts and accessories) in the original packaging and with all the necessary documents (invoice, warranty card, etc.). The product can be repaired only in the authorized service center of the importer. The costs of shipping the product to the service center are funded by the customer. Possible damage to the product that can occur during transport is at the expense and risk of the buyer sending the product from the service center to the customer is funded by the service technician if the product - Defects that can occur due to product fall, use of force, natural disasters (flood, fire, thunder, earthquake, ...) due to battery leakage, due to unstable 220V voltage, frequent variations and/or power outages, etc. - Damage caused during transport to the customer - Products that have been opened or repaired by an unauthorized person - Parts that are considered consumables such as batteries, etc.

Svi White Shark proizvodi su provjereni i testirani nakon svake faze proizvodnog procesa te imaju sve potrebne certifikate (EMC, CE...) te podliježu sljedećim jamstvenim uvjetima - Jamstveni rok na White Shark proizvode je 36 mjeseci (na baterije 6 m) i počinje teći danom prodaje u trgovini - Jamstvo se može ostvariti samo uz predložene originalnog računa o kupnji i uređeno popunjenoj jamstvenoj listi - sa žigom trgovine, te ako proizvod ima originalnu ambalažu i sve - sastavne dijelove i opremu. - Svi nedostaci i kvarovi koji su posljedica tvorničkih grešaka i koji su nastali u jamstvenom roku i pri normalnoj uporabi proizvoda i pri poštom su svih naputaka će biti otkonjeni. Ovo jamstvo obuhvaća samo greške nastale u materijalu i izradi. - Ako se proizvod pokvari tijekom jamstvenog roka, Vaš White Shark distributer će Vam proizvod popraviti ili zamijeniti nakon što ga provjeri stručna osoba - Ako popravak u ovlaštenom servisu nije izvršen u roku 30 dana od primitka u servis, proizvod ćemo zamijeniti novim. U slučaju da popravak u jamstvenom roku traje duže od 15 dana, jamstveni rok se produžuje za onoliko dana koliko je popravak trajao. - Ako se ukaze potreba popravka uređaja u jamstvenom roku, kontaktirajte trgovinu u kojoj ste proizvod kupili. Ako proizvod treba poslati ovlaštenom servisu ili generalnom distributeru, molimo vas da kompletan proizvod (sa svim dijelovima i opremom) bude zapakiran u originalnu ambalažu te da priložite sve potrebne dokumente (račun i ovjereni jamstveni listi). Popravak aparata vrši se isključivo u ovlaštenom servisu uvoznika. Troškove prijevoza proizvoda na servis snosi kupac. Kupac preuzima rizik za moguća oštećenja tijekom prijevoza. Slanje proizvoda od servisa do kupca snosi servise i uvoznik. Ovo jamstvo NE obuhvaća: - Oštećenja ili kvarove koji su nastali kao posljedica nepravilnog priključivanja, krive polarizacije, pogrešnog stavljanja baterija i sl. - Kvarove nastale zbog neopisnog rukovanja proizvodom, korištenja dijelova ili opreme koja nije propisana našim specifikacijama, neovlaštenog modifikiranja proizvoda te kvarove nastale mehaničkim oštećenjem proizvoda - Kvarove koji mogu nastati uslijed pada proizvoda, uporabe sile, više sile ili elementarnih nepogoda (poplava, požar, grom, potres...) uslijed curenja baterije, uslijed nestabilnog 220V napona, čestih varijacija i/ili nestanka struje i sl. - Oštećenja nastala pri prijevozu do kupca - Proizvod koji je otvoren i/ili popravljani od strane neovlaštene osobe - Dijelove koji se smatraju potrošnjima kao što su baterije i sl.

