

WHITE SHARK

DHAK
BT SPEAKER

User Manual



Please read user manual carefully and keep it for your records

Notice for Use:

- 1.For the first use, please charge the battery first. Do not play music while charging.
- 2.Please use certified DC 5V cable for charging.
- 3.When music is played, if the sound is intermittent, it may be lack of power, please charge it firstly.
- 4.Active the BT feature on the phone,laptops or tablets, and set the device to search for wireless device.


Specifications:

Material: ABS+FABRIC
BT version: 5.1
BT distance: 10 m
Rechargeable battery: 1200 mAh
Speaker power: 1 * 5W
Function: Hands-free/BT/FM/TF/TWS/USB/RGB
Dimension: 114 x 114 x 131 mm

Includes:

- 1*TYPE-C charging cable
- 1*User Manual
- 1*instruction card

Functional buttons:

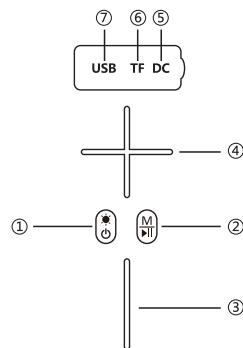

- ①ON/OFF,Light mode
- ②Mode switch,Play/Pause
- ③Volume down/Previous song
- ④Volume up/Next song/TWS
- ⑤TYPE-C for charging
- ⑥TF card playback
- ⑦U disk playback

ON/OFF Button:

Long press to turn on/off the speaker.
When you turn on the device, a sound will indicate "BT".
Activate the BT feature on your phone, and set the phone to search for BT device GBT-888 DHAK.
When Powered on,short press to adjust the light

M Button/ Play&Pause Button

Short press to pause or play music
For incoming calls, click to answer the call, click again to hang up the call, double click to reject the phone call.Double click in short time to redial the last number.
Long press to switch among BT,FM,USB Drive,TF Card.

TWS Function(need 2pcs speakers):

TWS allows you to sync 2 GBT-888 DHAK. Turn on both speakers. Make sure neither of GBT-888 DHAK are connected to any device. Pick one one of the 2 speakers and press "+" button twice quickly (mean Volume up/next song button)
Wait for the pairing names of both speakers to become one on your BT device list and once the two pairing names combine into one, select the one name. Double click again to disconnect TWS.

FM Mode:

When switch to FM mode, a sound will indicate "FM radio mode".
Short press M/PLAY&PAUSE button,The unit will scan from the lowest frequency to the highest frequency and will automatically save the stations found.
The unit will start to play the first station saved after scanned the whole FM band.
Long press volume button to adjust the volume to obtain the desired volume level.
Short press the volume button to select next or previous preset station.

Next Music/Increase Volume Button:

Short press to change to next music
Long press to increase the volume

Previous Music/Decrease Volume Button:

Short press to change to previous music
Long press to decrease the volume

USB Reading/TF Card Reading:

Insert the USB drive/TF card into the speaker to play MP3 file automatically, to change to previous/next music, adjust the volume by following the speaker buttons.

Charging:

Connect the small end of the TYPE-C charging cable (included) to the TYPE-C port located on the back of the speaker. Connect the larger end of the cable to your computer's USB port or an AC adaptor(not included).The LED indicator will turn red while charging. Once fully charged, the red LED will turn off.

Safety instructions:

Do not disassemble, throw away or damage this Product. Consult your local waste collection agency for proper disposal or recycling methods. This product is not a toy. Use extra caution while children are using this product.
Keep the wireless Speaker away from direct sunlight, fire and high voltage equipment. Do not store the Wireless Speaker inside a car during hot weather. Remember, a closed car acts as a greenhouse allowing the inside temperature to possibility reach over 70°C
Device may become warm while charging.Be assured to turn product completely off when plugging and unplugging into outlet.
Damage, shock, and/or injury can occur if this warning is not heeded properly.

WHITE SHARK

DHAK
BT SPEAKER

Upute



Molimo pažljivo pročitajte ove upute i sačuvajte ih

Napomena o korištenju:

1. Za prvu upotrebu, molimo napunite bateriju prvo. Ne reproducirajte glazbu tijekom punjenja.
2. Koristite certificirani DC 5V kabel za punjenje..
3. Ako se tijekom reprodukcije glazbe čuje prekidanje zvuka, moglo bi biti zbog nedostatka energije, molimo napunite uređaj.
4. Aktivirajte BT na telefonu, prijenosnom računaru ili tabletu te postavite uređaj da traži bežični uređaj.


Specifikacije:

Materijal: ABS+FABRIC
BT verzija: 5.1
Domet BT veze: 10 m
Punjiva baterija: 1200 mAh
Snaga zvučnika: 1 x 5W
Funkcije: Hands-free/BT/FM/TF/TWS/ USB/RGB
Dimenzije: 114 x 114 x 131mm

Paket uključuje:

- 1x Type-C kabel za punjenje
- 1x Korisnički priručnik
- 1x Upute

Funkcijske tipke:

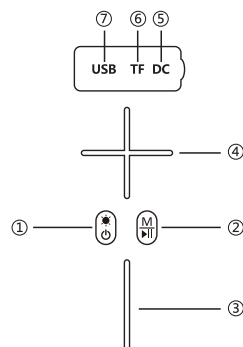

- ① UKLJUČI/ISKLUČI, Način svjetla
- ② Prekidač načina, Reproduciraj/Pauziraj
- ③ Smanji glasnoću/Prethodna pjesma
- ④ Povečaj glasnoću/Sljedeća pjesma/TWS
- ⑤ Type-C za punjenje
- ⑥ Reprodukcijska s TF kartice
- ⑦ Reprodukcijska s U diska

Uključi/Isključi gumb:

Dugim pritiskom uključite/isključite zvučnik.
Kada uključite uređaj, zvuk će označiti "BT".
Aktivirajte BT na svom telefonu i postavite telefon da traži BT uređaj "GBT-888 DHAK"
Kada je upaljen kratko pritisnite da prilagodite svjetlo.

M Gumb/ Gumb za Reproduciraj/Pauziraj

Kratkim pritiskom pauzirajte ili reproducirajte glazbu
Za dolazne pozive, kliknite za odgovor na poziv, ponovno kliknite za prekid poziva, dvostruki klik u kratkom vremenu za odbijanje poziva. Dugim pritiskom prebacite između BT, FM, USB pogona, TF kartice.

TWS funkcija (potrebna su 2 zvučnika):

TWS vam omogućuje sinkronizaciju dva GBT-888 DHAK zvučnika. Uključite oba zvučnika. Provjerite da se nijedan GBT-888 DHAK ne povezuje s bilo kojim uređajem. Odaberite jedan od 2 zvučnika i brzo pritisnite "+" gumb (označava gumb za povećanje glasnoće/sljedeću pjesmu). Pričekajte da se imena uparivanja oba zvučnika spoje na popisu BT uređaja na vašem uređaju, a kada se dva imena uparivanja spoje u jedno, odaberite to ime. Dvostruki klik ponovno za isključivanje TWS.

FM način:

Kada prebacite na FM način, zvuk će označiti "FM radio način".
Kratkim pritiskom na gumb M/PLAY&PAUSE, uređaj će skenirati od najniže do najviše frekvencije i automatski spremi pronađene stanice.
Uređaj će početi reproducirati prvu spremljenu stanicu nakon što pregleda cijeli FM opseg. Dugim pritiskom na gumb za glasnoću prilagodite glasnoću da biste dobili željeni nivo glasnoće.
Kratkim pritiskom na gumb za glasnoću odaberite sljedeću ili prethodnu prethodnu postavljenu stanicu.

Gumb za Sljedeću pjesmu/Povećanje glasnoće:

Kratkim pritiskom promijenite na sljedeću pjesmu. Dugim pritiskom povećajte glasnoću.

Gumb za Prethodnu pjesmu/Smanjenje glasnoće:

Kratkim pritiskom promijenite na prethodnu pjesmu.
Dugim pritiskom smanjite glasnoću.

Reprodukcija s USB pogona/TF kartice:

Umetnite USB pogon/TF karticu u zvučnik da biste automatski reproducirali MP3 datoteke, promijenite na prethodnu/sljedeću pjesmu i prilagodite glasnoću prema gumbima zvučnika.

Punjenje:

Povežite mali kraj Type-C kabela za punjenje (uključen) u Type-C priključak na stražnjoj strani zvučnika. Veći kraj kabela spojite na USB priključak na vašem računaru ili AC adapteru (nije uključen).
LED indikator će svijetliti crveno tijekom punjenja. Nakon potpunog punjenja, crveno LED svjetlo će se ugasiti.

Sigurnosne upute:

Ne rastavljajte, ne bacajte niti ne oštećujte ovaj proizvod. Savjetujte se s lokalnim agencijama za prikupljanje otpada o ispravnom odlaganju ili recikliranju. Ovaj proizvod nije igračka. Budite posebno oprezni kada djeca koriste ovaj proizvod.
Držite bežični zvučnik dalje od izravne sunčeve svjetlosti, vatre i uređaja s visokim naponom. Ne čuvajte bežični zvučnik u automobilu tijekom vrućeg vremena. Zapamtite, zatvoreni automobil djeluje kao staklenik i temperatura unutar njega može doseći više od 70°C.
Uređaj može postati topao tijekom punjenja. Budite sigurni da potpuno isključite proizvod prilikom uključivanja i isključivanja u utičnicu.
Oštećenja, udarci i/ili ozljede mogu se dogoditi ako se ovo upozorenje ne pridržava pravilno.