



IDAKKA

BT SPEAKER

User Manual



Please read user manual carefully and keep it for your records

Notice:

Please read user manual carefully and keep it for your records.

Specification:


- Bluetooth version: V5.1
- Wireless range: Up to 10m
- Rechargeable battery: 3.7V/2400mAh
- Output power: 10W
- Frequency range: 100Hz-20KHz
- Play time: 4-6 hours
- Charge time: 3-4 hours
- Function: BT/TF/FM/USB/AUX/Handsfree/RGB
- Dimension: 175×135×135mm
- Product weight: 825g

Package includes:


- Wireless speaker
- 1*Type-C cable
- 1*Aux Cable
- 1*User Manual
- 1*PP bag
- 1*Hanging strap

Functional buttons:

- 1.ON/OFF
- 2.Mode switch to FM
- 3.Microphone
- 4.Play/Pause
- 5.Volume up/Next song
- 6.Volume down/Previous song



- 7.Type-C for charging
- 8.LED indicator light
- 9.U disk playback
- 10.TF card playback
- 11.Aux-in slot

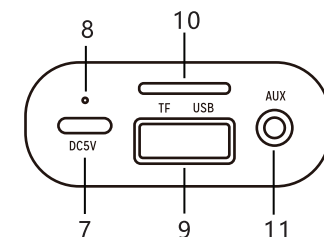

Pairing:

To turn on the speaker, long press No.1 button to power on; To turn off the speaker, long press the No.1 button to power off. When you turn on the device, a sound will indicate "Bluetooth mode". Activate the Bluetooth feature on your phone, and set the phone to search for Bluetooth device "GBT-619 IDAKKA"

Play/Pause Button:

- For incoming calls, click once to answer the call once again to hang up the call, hold the button for 2 seconds to reject the phone call.
- Click once to pause or play music; Click twice in short time to redial the last number.
- In FM mode, hold the play/pause button 2 seconds for frequency auto search, when you find the station that you want, click one more time to save the station in the Bluetooth speaker, then go to two volume buttons to choose the channel you want.
- If the FM signal is not very strong, you can insert the charging cable inside the speaker to strengthen the signal. (no need real charging under this situation)

Next Music/Increase Volume Button:

- Short press to change to next music
- Long press to increase the volume

Previous Music/Decrease Volume Button:

- Short press to change to previous music
- Long press to decrease the volume

USB Reading/TF Card Reading:

Insert the USB drive/TF card into the speaker to play MP3 file automatically, to change to previous/next music, adjust the volume by following the speaker buttons.

Aux-in Mode:

For AUX mode, please plug the included 3.5mm cable to the AUX hole, and connect the other end of the 3.5mm cable into your music device. A voice prompt will indicate "AUX mode" which means the connection is successful.

Charging:

- Connect the small end of the Type-C charging cable (include) to the Type-C port located on the back of the speaker. Connect the larger end of the cable to your computer's USB port or an AC adaptor (not included). The LED indicator will turn red while charging.
- Once fully charged, the red LED will turn off.
- Charging could take up to 3-4 hours.

Safety instructions:

- Do not disassemble, throw away or damage this Product. Consult your local waste collection agency for proper disposal or recycling methods.

- This product is not a toy. Use extra caution while children are using this product.
- Keep the wireless speaker away from direct sunlight, fire and high voltage equipment. Do not store the wireless speaker inside a car during hot weather. Remember, a closed car acts as a greenhouse allowing the inside temperature to possibly reach over 200 degrees. Device may become warm while charging.
- Be assured to turn product completely off when plugging and unplugging into outlet.
- Damage, shock, and/or injury can occur if this warning is not heeded properly.

Notice for Use:

- 1.For the first use, please charge the battery first. Do not play music while charging.
- 2.Please use certified DC 5V cable for charging.
- 3.When music is played, if the sound is intermittent, it may be lack of power, please charge it firstly.
- 4.Active the Bluetooth feature on the phone, laptops, tablets, and set the device to search for wireless device. It will have the prompt voice to show when the pairing is done.
- 5.When using the mobile phone connection, if there is a call, the speaker will suspend music automatically; you can press the play button to answer the call, press the play button again to end the call, you also can hang up from the mobile phone.



IDAKKA

BT SPEAKER

Upute



Molimo pažljivo pročitajte ove upute i sačuvajte ih

Napomena:

Molimo vas da pažljivo pročitate upute za uporabu i sačuvate ih za svoje zapise.

Specifikacije:


- Bluetooth verzija: V5.1
- Domet bežične veze: do 10m
- Punjiva baterija: 3.7V/2400mAh
- Izlazna snaga: 10W
- Frekvencijski raspon: 100Hz-20KHz
- Vrijeme reprodukcije: 4-6 sati
- Vrijeme punjenja: 3-4 sata
- Funkcije: BT/TF/FM/USB/AUX/Handsfree/RGB
- Dimenzije: 175 x 135 x 135mm
- Težina proizvoda: 825g

Paket uključuje:


- Bežični zvučnik 1x
- Type-C kabel 1x
- Aux kabel 1x
- Uputa za uporabu 1x
- PP vrećica 1x
- Vežica 1x

Funkcijske tipke

1. UKLJUČI/ISKLJUČI
2. Prebacivanje na način FM
3. Mikrofon
4. Reproduciraj/Pauziraj
5. Povećaj glasnoću/Sljedeća pjesma
6. Smanji glasnoću/Prethodna pjesma



7. Type-C za punjenje
8. LED indikatorsko svjetlo
9. Reprodukcijski uređaj s USB
10. Reprodukcijski uređaj s TF kartice
11. Ulaz za AUX kabel

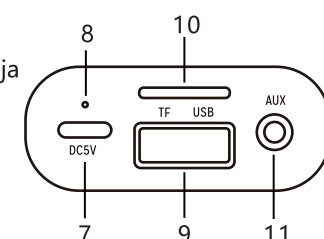

Uparivanje:

Za uključivanje zvučnika, dugotrajno pritisnite gumb broj 1 da biste ga uključili; Za isključivanje zvučnika, dugotrajno pritisnite gumb broj 1 za isključivanje. Kada uključite uređaj, zvuk će signalizirati "Bluetooth način". Aktivirajte Bluetooth značajku na svom telefonu i postavite telefon da traži Bluetooth uređaj "GBT-619 IDAKKA".

Gumb za Reprodukciju/Pauziranje:

- Za dolazne pozive, jednim klikom odgovorite na poziv, a ponovnim klikom prekinite poziv; držite gumb 2 sekunde da biste odbili poziv.
- Jednim klikom pauzirajte ili reproducirajte glazbu; dvaput brzo kliknite da biste ponovno birali zadnji broj.
- U FM načinu, držite gumb za reprodukciju/pauziranje 2 sekunde za automatsko pretraživanje frekvencija, kad pronađete stanicu koju želite, još jednom kliknite da biste je sačuvali na Bluetooth zvučniku, a zatim koristite dva gumba za glasnoću za odabir željenog kanala.
- Ako FM signal nije vrlo snažan, možete umetnuti kabel za punjenje unutar zvučnika kako biste pojačali signal (u ovom slučaju nije potrebno stvarno punjenje).

Gumb za Sljedeću Pjesmu/Povećanje Glasnoće:

- Kratko pritisnite za prelazak na sljedeću pjesmu
- Dugim pritiskom povećajte glasnoću

Gumb za Prethodnu Pjesmu/Smanjenje Glasnoće:

- Kratko pritisnite za prelazak na prethodnu pjesmu
- Dugim pritiskom smanjite glasnoću

Čitanje s USB uređaja/Čitanje s TF kartice:

Umetnite USB pogon/TF karticu u zvučnik kako biste automatski reproducirali MP3 datoteke; promijenite prethodnu/sljedeću pjesmu, prilagodite glasnoću prateći gumb na zvučniku.

Način Aux-in:

Za AUX način, priključite priloženi 3,5 mm kabel u AUX utičnicu, a drugi kraj 3,5 mm kabela spojite s uređajem za reprodukciju glazbe. Glasovni signal će pokazati "AUX način", što znači da je veza uspješna.

Punjenje:

- Priključite mali kraj Type-C kabela za punjenje (uključenog) u Type-C priključak na stražnjoj strani zvučnika. Povežite veći kraj kabela s USB priključkom na računalo ili AC adapteru (nije uključen). LED indikator će biti crven dok se puni

- Kada se potpuno napuni, crvena LED svjetla će se ugasiti.
- Punjenje može potrajati 3-4 sata.

Upute za sigurnost:

- Ne rastavljajte, ne bacajte niti ne oštećujte ovaj proizvod. Konzultirajte svoju lokalnu agenciju za sakupljanje otpada kako biste pravilno odlagali ili reciklirali.

- Ovaj proizvod nije igračka. Budite posebno oprezni kada ga koriste djeca.

- Držite bežični zvučnik dalje od izravne sunčeve svjetlosti, vatre i uređaja s visokim naponom. Ne držite bežični zvučnik u automobilu tijekom vrućeg vremena. Zapamtite, zatvoreni automobil djeluje kao staklenik i može dopustiti da temperatura unutra doseže više od 70°C. Uređaj može postati topao tijekom punjenja. Budite sigurni da potpuno isključite proizvod prilikom priključivanja i isključivanja iz utičnice.

- Oštećenja, udari i/ili ozljede mogu se dogoditi ako ova upozorenja nisu pravilno uvažena.

Napomene za korištenje:

1. Za prvu upotrebu, molimo vas da prvo napunite bateriju. Ne reproducirajte glazbu tijekom punjenja.
2. Molimo vas da koristite certificirani DC 5V kabel za punjenje.
3. Ako se tijekom reprodukcije glazbe čuje prekidanje zvuka, može biti zbog nedostatka energije. Molimo vas da prvo napunite uređaj.
4. Aktivirajte Bluetooth značajku na svom telefonu, prijenosnom računalo ili tabletu, i postavite uređaj da pretražuje bežični uređaj. Imat će vam prompt voz za prikaz kada je uparivanje završeno.
5. Prilikom korištenja mobilnog telefona, ako primite poziv, zvučnik će automatski obustaviti reprodukciju glazbe; možete pritisnuti gumb za reprodukciju da biste odgovorili na poziv, ponovno pritisnite gumb za reprodukciju da biste završili poziv, također možete završiti poziv putem mobilnog telefona.