



# BT-60

# TANGO

## BT speaker

## BT zvučnik


EN

HR

### USER MANUAL / UPUTE

Please read this user manual carefully before operating the device and save it for the future.

Pažljivo pročitajte ovaj korisnički priručnik prije korištenja uređaja i sačuvajte ga za budućnost.


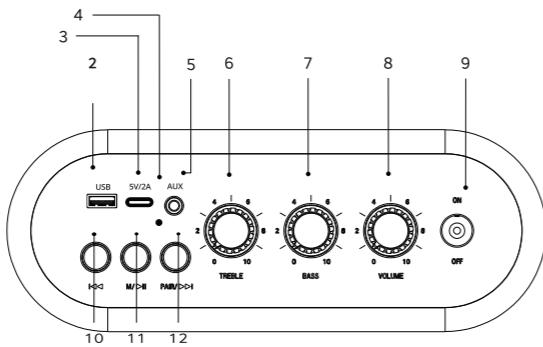


#### GENERAL INFORMATION

1. Stereo dynamics
2. USB play
3. Power supply
4. LED-indicator
5. AUX input
6. Treble knob
7. Bass knob
8. Volume knob
9. Power switch
10. Backward button - Press - play previous song (BT mode)
11. Play/pause/mode button
12. Forward button
13. Bass ports

#### OPĆE INFORMACIJE

1. Stereo dinamika
2. USB za flash memoriju
3. Type-C sučelje za punjenje
4. LED-indikator
5. AUX ulaz
6. Gumb za visoke tonove - U smjeru kazaljke na satu - povećanje // U smjeru suprotnom od kazaljke na satu - smanjenje
7. Gumb za bas - U smjeru kazaljke na satu - povećanje // u smjeru suprotnom od kazaljke na satu - smanjenje
8. Gumb za glasnoću - Okretanje u smjeru kazaljke na satu - povećanje // Okretanje u smjeru suprotnom od kazaljke na satu - smanjenje
9. Prekidač napajanja
10. Gumb za povratak - Pritisnite - reproducirajte prethodnu pjesmu (BT mod)
11. Gumb za reprodukciju/pauzu/odabir načina - Kratki pritisak - reprodukcija/pauza (BT način) - Dugi pritisak - promjena načina
12. Gumb Naprijed - Kratak pritisak - reprodukcija sljedeće pjesme (BT mod) - Dugi pritisak - osvježite BT vezu
13. Bas priključci

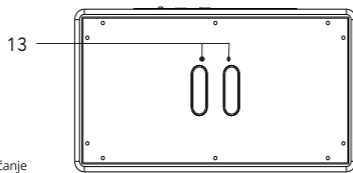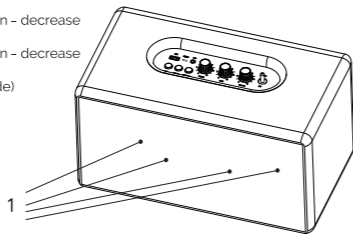

#### OPERATION OF THE DEVICE

##### POWER SUPPLY

Please charge your device before using it. Use the Type-C cable (supplied), then connect one side to the Wireless speaker and the other side to the 5V/2A adapter (provide for oneself).

##### POWER ON

Switch the Power switch (9) to 'On' position. Turned-on LED indicator #1 will confirm power on

##### POWER OFF

Switch the Power switch (9) to 'Off' position. Turned-off LED indicator #1 will confirm power off

##### PAIRING VIA BT

Turn on the speaker. The speaker will automatically switch to BT mode

Open BT settings on your smartphone/PC, enable BT and search for new devices. When BT speaker BT-60 TANGO is found, confirm pairing.

After successful pairing both the BT speaker and your device, you can control playback by BT speaker buttons

##### AUX PLAY

Use (supplied) AUX cable and connect it to the BT speaker by one side (AUX port) and the external device by another side. Be sure that cable is well connected. Long press Play/Pause/mode button to switch the BT speaker into AUX mode

##### SOUND CONTROL

You can control Treble and Bass. Turn knob (6) and (7) clockwise to increase Treble/Bass and counterclockwise to decrease Treble/Bass

##### STORAGE CONDITIONS

Keep the device in a dry, well-ventilated place, far from heaters and direct sunlight. Keep the device out of reach of children. Do not bite or lick the device, as it may cause damage or explode the device. Children or persons with disabilities should not use the device without supervision of the responsible person.

#### RAD UREĐAJA

##### NAPAJANJE

Napunite svoj uređaj prije korištenja. Upotrijebite Type-C kabl (isporučeni), zatim spojite jednu stranu na bežični zvučnik, a drugu stranu na 5V/2A adapter (osigurajte sami).

##### UKLJUČITE

Prebacite prekidač napajanja (9) u položaj 'On'. Upaljeni LED indikator #1 potvrdit će uključenje

##### ISKLJUČITE

Prebacite prekidač za napajanje (9) u položaj 'Isključeno'. Ugašeni LED indikator #1 potvrdit će isključenje

##### POVEZIVANJE PUTEM BT

Uključite zvučnik. Zvučnik će se automatski prebaciti u BT mod

Otvorite BT postavke na pametnom telefonu ili računalu, omogućite BT i tražite nove uređaje. Kada se pronađe BT zvučnik BT-60 TANGO, potvrdite spajanje.

Nakon uspješnog uparivanja BT zvučnika i vašeg uređaja, možete kontrolirati reprodukciju pomoću gumba BT zvučnika

##### AUX SVRANJE

Upotrijebite (isporučeni) AUX kabl i povežite ga s BT zvučnikom s jedne strane (AUX priključak) i vanjskim uređajem s druge strane. Provjerite je li kabl dobro spojen. Dugo pritisnite tipku za reprodukciju/pauzu/način rada za prebacivanje BT zvučnika u AUX način rada

##### KONTROLA ZVUKA

Možete kontrolirati visoke i niske tonove. Okrenite gumb (6) i (7) u smjeru kazaljke na satu za povećanje visokih/niskih tonova i suprotno od kazaljke na satu za smanjenje visokih tonova/niskih tonova

##### UVJETI ČUVANJA

Držite uređaj na suhom, dobro prozračenom mjestu, daleko od grijaa i izravne sunčeve svjetlosti. Čuvajte uređaj izvan dohvata djece. Nemojte gristi ili lizati uređaj jer se može oštetiti ili eksplodirati. Djeca ili osobe s invaliditetom ne smiju koristiti uređaj bez nadzora odgovorne osobe.

#### TRUE WIRELESS STEREO DUAL SPEAKER MODE PAIRING

When you have two speakers of the exact same model number/ BT name, you can use them together in True Wireless Stereo Dual Speaker mode. This means that you can play the same music synchronized to both speakers.

##### How to TWS pair the speakers:

1. Turn on both speakers. Make sure both speakers are in BT mode.

2. When the speaker is BT connected or not in Bluetooth mode, long press the backward button (10) to enter or exit TWS Dual mode. BT light will flash slowly in TWS pairing status, and the blue light will be on when the pairing is successful.

A sound notification will confirm that the master speaker is looking for connection to the second speaker. Wait around 5 seconds and a new sound notification from both the master speaker and the second speaker will confirm successful pairing.

NOTE! The speaker buttons and sound control will only work on the master speaker in TWS Dual Speaker mode. The master speaker is where you long pressed the backward button (10).

To deactivate TWS Dual Speaker mode, press and hold the Backward Button (10) on the master speaker.

Repeat the above steps if you want to pair the speakers again.

Note! Make sure that both speakers are within the maximum BT distance of 10m.

#### TRUE WIRELESS STEREO UPARIVANJE DVA ZVUČNIKA

Kada imate dva zvučnika potpuno istog broja modela/ BT naziva, možete ih koristiti zajedno u načinu rada True Wireless Stereo Dual Speaker. To znači da možete reproducirati istu glazbu sinkroniziranu na oba zvučnika.

##### Kako povezati dva zvučnika pomoću TWS-a

1. Uključite oba zvučnika. Provjerite jesu li oba zvučnika u BT načinu rada.  
2. Kada je zvučnik BT povezan ili nije u BT modu, dugo pritisnite tipku za povratak (10) za ulazak ili izlaz iz TWS Dual moda.  
BT svjetlo će treptati polako u statusu TWS uparivanja, a plavo svjetlo će biti uključeno kada je uparivanje uspješno.

Zvučna obavijest potvrdit će da glavni zvučnik traži vezu s drugim zvučnikom. Pričekajte oko 5 sekundi i nova zvučna obavijest iz glavnog zvučnika i drugog zvučnika potvrdit će uspješno uparivanje.

BIJJEŠKA! Gumbi zvučnika i kontrola zvuka radić će samo na glavnom zvučniku u TWS načinu rada dva zvučnika. Glavni zvučnik je mjesto gdje ste dugo pritisnuli gumb za povratak (10).

Za deaktivaciju TWS Dual Speaker moda, pritisnite i držite tipku za povratak (10) na glavnom zvučniku.

Ponovite gornje korake ako želite ponovno upariti zvučnike.

Bilješka! Provjerite jesu li oba zvučnika unutar najveće udaljenosti od 10m.

#### TECHNICAL INFORMATION

Model No:	BT-60 TANGO
Material:	Mdf Wood, plastic
Power	Type-C, 5V/2A with battery 7.4V 6000mAh
Battery:	No
BT version	V 5.0
BT name	BT-60 TANGO
Frequency range:	43 Hz - 20 kHz
Speaker power:	60 W
Broadband speakers:	3
Stereo:	Yes
Number of bands:	2
Subwoofer:	Yes
Interfaces:	DC-IN, AUX 3.5mm, BT
Audio files support:	mp3, wav, wma, ape
HD-audio support:	Flac
Size:	355 x 195 x 195 mm
Weight:	4800 g

#### SAFETY INFORMATION

- 1) It is high recommended to use a compliant 5V/2A adapter to charge the device.
- 2) In cause of breaking do not try to open and repair device by yourself. Use service center
- 3) Avoid influence of the high humidity, dust and dirt. Use dry soft lint-free cloth to clean device.
- 4) Do not allow to use washing or cleaning liquids
- 5) Do not store or use device near heat sources and flammable objects, during low or high ambient temperature. Recommended temperature is 5 to 35°C
- 6) Not allowed to drop or hit device. Do not insert foreign objects to the device interfaces
- 7) Turn off device after use. Never pull the cord to disconnect cable, pull the plug.
- 8) BT speaker is not intended for the commercial use.
- 9) Do not cover working device by cloth or other materials.

#### TEHNIČKE INFORMACIJE

Broj modela:	BT-60 TANGO
Materijal:	Mdf drvo, plastika
Napajanje:	Type-C, 5V/2A s baterijom 7.4V 6000mAh
Baterija:	Ne
BT verzija:	V5.0
BT naziv:	BT-60 TANGO
Raspon frekvencija:	43 Hz - 20 kHz
Snaga zvučnika:	60 W
Širokopojasni zvučnici:	3
Stereo:	Da
Broj bendova:	2
Subwoofer:	Da
Sučelje:	DC-IN, AUX 3.5 mm, BT
Podržava audio datoteke:	mp3, wav, wma, ape
HD-audio podrška:	Flac
Veličina:	355 x 195 x 195 mm
Težina:	4800 g

#### SIGURNOSNE INFORMACIJE

- 1) Za punjenje uređaja preporučuje se korištenje kompatibilnog adaptera od 5 V/2 A.
- 2) U slučaju kvara ne pokušavajte sami otvoriti i popraviti uređaj. Koristite servisni centar
- 3) Izbjegavajte utjecaj visoke vlažnosti, prašine i prljavštine. Za čišćenje uređaja koristite suhu meku krpu koja ne ostavlja dlačice. Nije dopušteno koristiti tekućine za pranje ili čišćenje.
- 4) Nemojte skladištiti ili koristiti uređaj u blizini izvora topline i zapaljivih predmeta, tijekom niske ili visoke temperature okoline. Preporučena temperatura je od 5 do 35°C
- 5) Nije dopušteno ispustiti ili udariti uređaj.
- 6) Nemojte umetati strane objekte na sučelje uređaja
- 7) Isključite uređaj nakon upotrebe.
- 8) Nikada nemojte povlačiti kabl da biste isključili kabl, izvucite utikač iz utičnice.
- 9) BT zvučnik nije namijenjen za komercijalnu upotrebu.
- 10) Nemojte prekrivati uređaj s tkaninom ili drugim materijalima.

