


# Tripod projector screens manual (PSMT series)

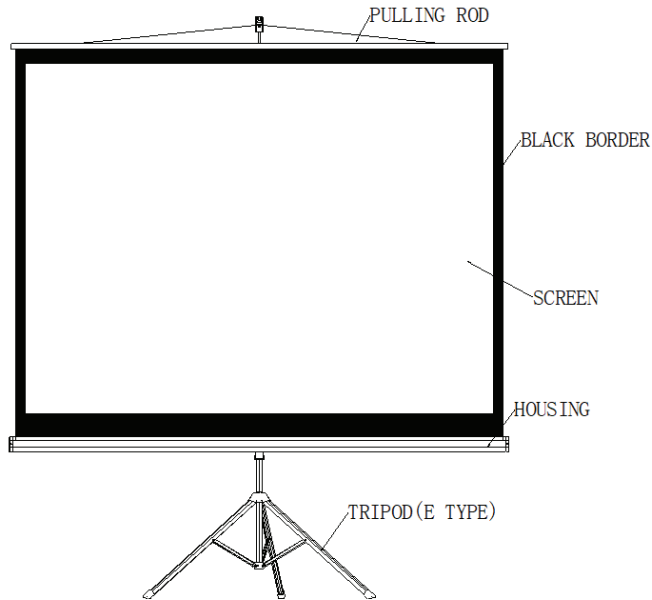

## 1. INSTALLING

Choose a suitable place for installing, open the tripod feet first, pull out the upper bar to a suitable height and lock it. Hang the pulling rod above to the goose neck and adjust the screen height, then finally fix/lock it at the position which you want. After using, release the screen and put it back to the housing.

## 2. USEFUL INSTRUCTIONS

The tripod legs should be placed steady.

When adjusting the height of screen, move the upper bar slowly and carefully.

## 3. WARNINGS


a. The screen cannot be folded. Do not use fingers or hard objects to touch the screen surface. Do not splash the milk, fruit juice or other chemical doses to the screen surface. Keep the screen far away from high temperature objects or fire.

b. If the screen is dirty, wash it gently with a clean cloth or a cotton ball. Do not use the organic solvents to clean the screen surface.

c. When pulling the screen down, it must be done slowly and vertically. Do not pull it roughly. Stop pulling as soon as the black border is out or when the screen is jammed. Send the screen to the service center if the jammed is permanent.

d. After using, retract the screen back to the housing in order to prevent dirt. If not using it for a long time, please remove the screen from the wall and pack it in a carton.

# Upute za projektorska platna s tronošcem (PSMT serije)

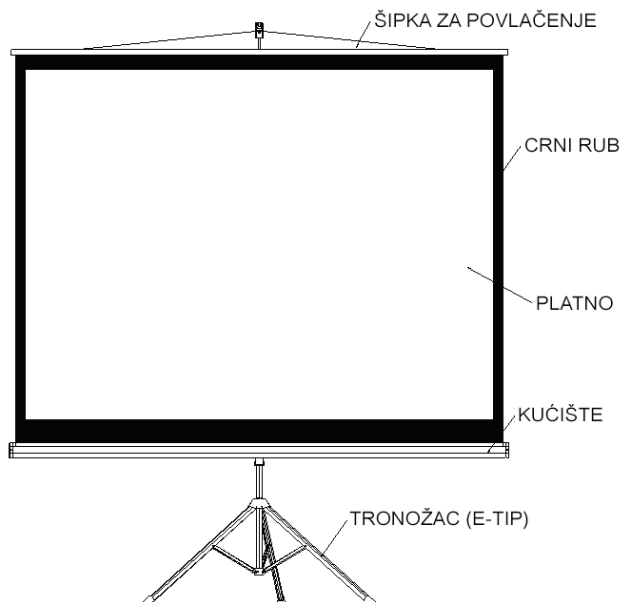

## 1. MONTAŽA

Odaberite prikladno mjesto za montažu, prvo otvorite noge tronožnog stalaka, izvucite gornju šipku na odgovarajuću visinu i zaključajte je. Objesite šipku za povlačenje iznad kuke i prilagodite visinu zaslona, zatim ga konačno fiksirajte/zaključajte na željenom položaju. Nakon upotrebe, otpustite projektorsko platno i vratite ga natrag u kućište.

## 2. KORISNE UPUTE

Noge stalaka trebaju biti postavljene čvrsto.

Prilikom podešavanja visine projektorskog platna, pomičite gornju šipku polako i pažljivo.

## 3. UPOZORENJA

a. Projektorsko platno se ne može presavijati. Površinu projektorskog platna nemojte dirati prstima ili tvrdim predmetima. Ne prskajte mlijeko, voćni sok ili druge kemijske tvari po površini projektorskog platna. Držite projektorsko platno dalje od visoke temperature ili vatre.

b. Ako je projektorsko platno prljavo, nježno ga operite čistom krpom ili pamučnom kuglicom. Ne koristite organska otapala za čišćenje površine projektorskog platna.

c. Kada povlačite projektorski zaslon prema dolje, to mora biti polako i vertikalno. Ne povlačite ga grubo. Zaustavite povlačenje čim crni rub izađe ili kad je projektorsko platno zaglavljeno. Pošaljite projektorsko platno u servisni centar ako je trajno zaglavljeno.

d. Nakon upotrebe, povucite projektorsko platno natrag u kućište kako biste spriječili prljavštinu. Ako ga ne koristite dugo vremena, uklonite projektorsko platno sa zida i spakirajte ga u karton.