




# HYPERION

MICROPHONE ARM

## USER GUIDE / UPUTE


Step 1: Tighten the screw, fix the bottom base to the table.

Korak 1: Zategnite vijak i pričvrstite donju bazu na stol.

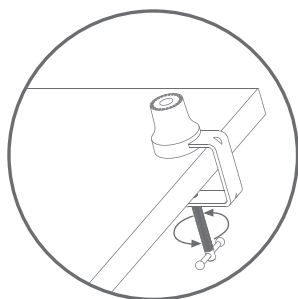


Step 3: Insert the boom arm to the bottom base.

Korak 3: Umetnite ruku nosača u donju bazu.

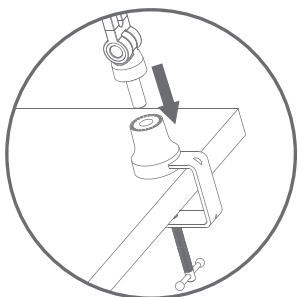


Step 3: Use the spanner to tighten the joints.

Korak 3: Upotrijebite ključ da zategnete spojeve.

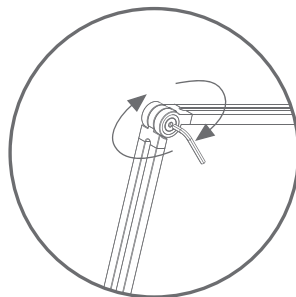

Step 4: Use the cable clamp to fix wire.

Korak 4: Upotrijebite stezaljku za kabel kako biste učvrstili žicu.

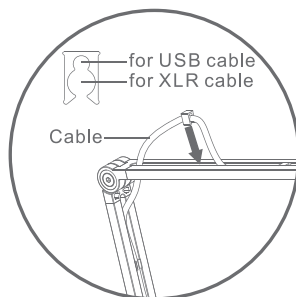

Step 5: Put the spanner to a clip when work finish.

Korak 5: Kada završite s radom, stavite ključ na držač/klip.

